

ROBERT E. ROY
150A BRITTANY FARMS RD.
NEW BRITAIN, CT. 06053

Colt Manual No. CM101

M16A1

RIFLE

**OPERATION AND MAINTENANCE
INSTRUCTIONS**

REVISED JANUARY 1980



WARNINGS

WARNING: IF THIS FIREARM IS CARELESSLY OR IMPROPERLY HANDLED, UNINTENTIONAL DISCHARGE COULD RESULT AND COULD CAUSE INJURY, DEATH, OR DAMAGE TO PROPERTY.

WARNING: IF THE BARREL IS VERY HOT FROM FIRING THERE IS A RISK OF COOK-OFF (i.e., A ROUND IN THE CHAMBER DISCHARGING BY ABSORBING HEAT FROM THE BARREL). A COOK-OFF CAN OCCUR ANY TIME AFTER CHAMBERING A ROUND IN A VERY HOT BARREL. WHEN THIS CONDITION IS SUSPECTED THE CHAMBER MUST BE CLEARED IMMEDIATELY AFTER FIRING.

WARNING: DO NOT ATTEMPT TO FIRE IF WATER IS IN THE BARREL FROM FORDING, HEAVY RAIN OR THICK FOG. OPEN THE BOLT AND ALLOW WATER TO DRAIN BEFORE FIRING. CLEAN A WET RIFLE AS SOON AS POSSIBLE.

FIVE BASIC SAFETY RULES

1. ALWAYS POINT A GUN IN A SAFE DIRECTION.
2. KEEP FIRE CONTROL SELECTOR ON SAFE UNTIL READY TO FIRE.
3. UNLOAD WHEN NOT IN USE.
4. ALWAYS ENSURE A GUN IS NOT LOADED BEFORE CLEANING OR DISMANTLING.
5. PRACTICE HANDLING AN EMPTY GUN BEFORE ATTEMPTING TO FIRE.

CAUTIONS FOR FIRING

1. WEAR EAR PROTECTION WHEN SHOOTING ON A RANGE TO REDUCE THE RISK OF CUMULATIVE LONG TERM PERMANENT HEARING LOSS.
2. BE SURE OF YOUR TARGET AND THE AREA BEHIND IT. WITHOUT AN ADEQUATE BACKSTOP, BULLETS MAY TRAVEL UP TO 3 MILES PAST OR THROUGH YOUR TARGET.
3. TAKE PRECAUTIONS TO AVOID CONTAMINATION BY ACCUMULATIONS OF TOXIC GAS FUMES OR LEAD DUST WHERE FIREARMS ARE USED INDOORS OR WITHIN A CONFINED SPACE.

CAUTIONS FOR MAINTENANCE

1. ENSURE THAT MAGAZINE IS REMOVED AND THE RIFLE IS NOT LOADED BEFORE STRIPPING, CLEANING OR INSPECTING SO THAT IT WILL NOT FIRE.
2. WEAR SAFETY GLASSES IN CASE YOU LOSE CONTROL OF SOME SPRING LOADED COMPONENT WHICH COULD INJURE YOUR EYES.
3. DO NOT PERMIT LIVE AMMUNITION IN OR NEAR THE WORK AREA.
4. TAKE PRECAUTIONS WHEN HANDLING CLEANING FLUIDS AND LUBRICANTS. IF IN DOUBT SEEK ADVICE FROM THE MANUFACTURERS OF THESE PRODUCTS.

TABLE OF CONTENTS

| Section No. | Title | Page No. |
|----------------|---|-------------|
| | CHAPTER I—INTRODUCTION | |
| 1 | Scope of Manual | 1 |
| 2 | Description and Data | 2 |
| | CHAPTER II—OPERATION | |
| 1 | Cycle of Operation | 7 |
| 2 | Controls | 14 |
| 3 | Operating Instructions—Usual Conditions | 17 |
| 4 | Operating Instructions—Unusual Conditions | 23 |
| 5 | Functional Check | 25 |
| 6 | Pre-issue Service | 27 |
| 7 | Pre-functioning Lubrication | 28 |
| | CHAPTER III—OPERATOR AND UNIT MAINTENANCE INSTRUCTIONS | |
| 1 | Tools and Materials Required For Maintenance | 29 |
| 2 | Operator Maintenance Procedures, Usual Conditions | 31 |
| 3 | Unit Maintenance Instructions | 44 |
| 4 | Preventive Maintenance Services | 51 |
| 5 | Troubleshooting | 52 |
| | CHAPTER IV—ACCESSORY EQUIPMENT | |
| 1 | Bayonet and Scabbard | 58 |
| 2 | Bipod, Rifle | 60 |
| | CHAPTER V—AMMUNITION | 62 |
| | APPENDIXES | |
| A | Parts List (Operator Installed) | 63 |
| B | Parts List (Unit Maintenance Installed) | 64 |
| C | Bore & Chamber Cleaning Tools | 69 |
| D | Buttstock Stowage Disassembly | 70 |

LIST OF ILLUSTRATIONS

| Figure No. | Title | Page No. |
|------------|---|----------|
| 1-1 | M16A1 Rifle (Right View) | 1 |
| 1-2 | M16A1 Rifle (Left View) | 1 |
| 1-3a | Major Groups of Rifle | 3 |
| 1-3b | Rifle Parts | 4 |
| 1-4 | Bolt Carrier Assembly | 5 |
| 2-1 | Feeding | 8 |
| 2-2 | Chambering | 8 |
| 2-3 | Locking | 9 |
| 2-4 | Firing | 9 |
| 2-5 | Extracting | 11 |
| 2-6 | Ejecting | 11 |
| 2-7 | Normal Cocking | 13 |
| 2-8 | Semiautomatic Cocking with Trigger Held Back | 13 |
| 2-9 | Automatic Cocking and Firing | 14 |
| 2-10 | Rifle Controls | 15 |
| 2-11 | Clearing the Rifle | 17 |
| 2-12 | Magazine Loading, Cartridge Orientation | 18 |
| 2-13 | Magazine Loaded, First Cartridge | 18 |
| 2-14 | Protective Cap | 24 |
| 3-1 | Receiver Separation Procedure | 32 |
| 3-2 | Bolt Carrier Assembly and Charging Handle Removal | 33 |
| 3-3 | Bolt Carrier Disassembly | 33 |
| 3-4 | Handguard Removal | 35 |
| 3-5 | Buffer and Action Spring Removal | 36 |
| 3-6 | Magazine Disassembly | 37 |
| 3-7 | Magazine Box Cleaning | 37 |
| 3-8 | Cleaning with Bore Brush | 38 |
| 3-9 | Cleaning Chamber and Key | 39 |
| 3-10 | Wiping Parts Clean and Dry and Cleaning Buttstock Drain Hole | 39 |
| 3-11 | Internal Lubrication of Barrel Bore | 42 |
| 3-12 | Application of LSA Lubricant (or equivalent) | 42 |
| 3-13 | Ejector Disassembly | 44 |
| 3-14 | Buttstock Removal & Disassembly of Detents and Takedown Pin | 45 |
| 3-15 | Fire Control Selector Detent Disassembly | 47 |
| 3-16 | Front Sight Post Disassembly | 48 |

LIST OF ILLUSTRATIONS

| Figure No. | Title | Page No. |
|------------|---------------------------------|----------|
| 3-17 | Windage Drum Detent Disassembly | 48 |
| 4-1 | Bayonet-Knife and Scabbard | 58 |
| 4-2 | Bayonet Installation | 59 |
| 4-3 | Bipod | 60 |
| 4-4 | Bipod Installation | 61 |

Appendix

| | | |
|-----|---------------------------------|----|
| B-1 | Key to Parts List Illustrations | 65 |
| B-2 | Bolt Carrier Assembly Parts | 66 |
| B-3 | Upper Receiver Parts | 67 |
| B-4 | Lower Receiver Parts | 68 |
| C-1 | Bore and Chamber Cleaning Tools | 69 |
| D-1 | Buttstock Stowage Disassembly | 70 |

ASSOCIATED MANUAL

The scope of this manual, CM101, is outlined on page 1. When deeper maintenance is required, refer to Colt Manual CM102, which provides instructions for the armorer and depot shop personnel to carry out inspection and maintenance on the 5.56 mm M16A1 Rifle; the Bipod, U.S. Model M3; the Bayonet-Knife, U.S. Model M7; and Scabbard, U.S. Model M8A1. The level of maintenance covered in CM102 is normally beyond the scope of tools and equipment available to the operator and/or his operational unit.

CHAPTER I—INTRODUCTION

SECTION 1—SCOPE OF MANUAL

1-1. Scope

This manual contains instructions for the operation and Unit maintenance of the 5.56mm M16A1 Rifle (Figs. 1-1 and 1-2); the Bipod, U.S. Model M3; the Bayonet-Knife, U.S. Model M7; and the Scabbard, U.S. Model M8A1. This manual may also be used for maintenance of the M16 rifle.

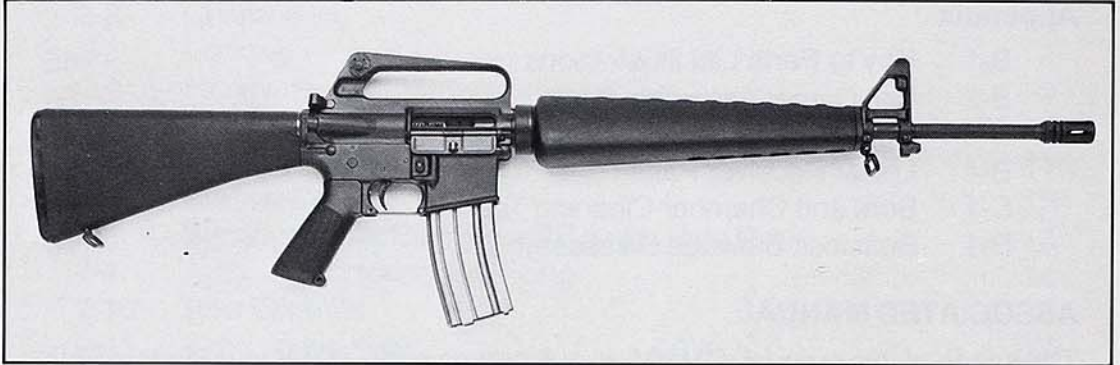


FIGURE 1-1. M16A1 RIFLE (RIGHT VIEW)



FIGURE 1-2. M16A1 RIFLE (LEFT VIEW)

1-2. Recommendations for Improvement of this Manual.

User reports of errors or omissions and recommendations for improving this manual are encouraged.

It is requested that such reports be submitted to:

Colt Firearms
150 Huyshope Avenue
Hartford, Connecticut 06102
U.S.A.

SECTION 2—DESCRIPTION AND DATA

1-3 Description (Refer to Figure 1-3, page 3)

The M16A1 Colt Rifle is a lightweight, air cooled, gas operated, magazine fed, shoulder weapon. It is capable of semiautomatic or automatic fire. The Rifle accommodates the U.S. Model M7 Bayonet-knife. The Rifle is easily opened to expose the working parts for inspection and cleaning. A brief description of the major components of the Rifle follows:

1-3.1 Upper Receiver and Barrel Assembly Group.

1-3.1.1 Barrel Group

The barrel group consists of the barrel and barrel extension assembly, the handguard cap, the front sight group, the flash suppressor, barrel nut and slip ring assembly, and the left and right handguards. The front sight group is comprised of the forward sling swivel assembly, the front sight and gas tube assembly, and the front sight post which is adjustable vertically for elevation. The handguards have heat resisting inner shields.

1-3.1.2 Upper Receiver Group

The upper receiver group contains the upper receiver, bolt carrier assembly, forward assist assembly, charging handle, ejection port cover assembly, and mounting provisions for the barrel assembly. A carrying handle forms the top of the upper receiver. The rear sight, which is adjustable laterally for windage, is housed in the handle where provision is also made for a telescope sight to be attached.

1-3.2 Lower Receiver and Buttstock Assembly.

The lower receiver and buttstock assembly consists of the lower receiver, the pistol grip, lower receiver extension, and buttstock. The lower receiver contains the trigger, fire control selector, bolt catch, disconnect, automatic sear, and magazine catch. The receiver extension, which is the mounting device for the buttstock, contains the buffer assembly and the action spring. The receivers are made of aluminum alloy, durable yet light in weight while the buttstock and pistol grip are made of high impact plastic material.

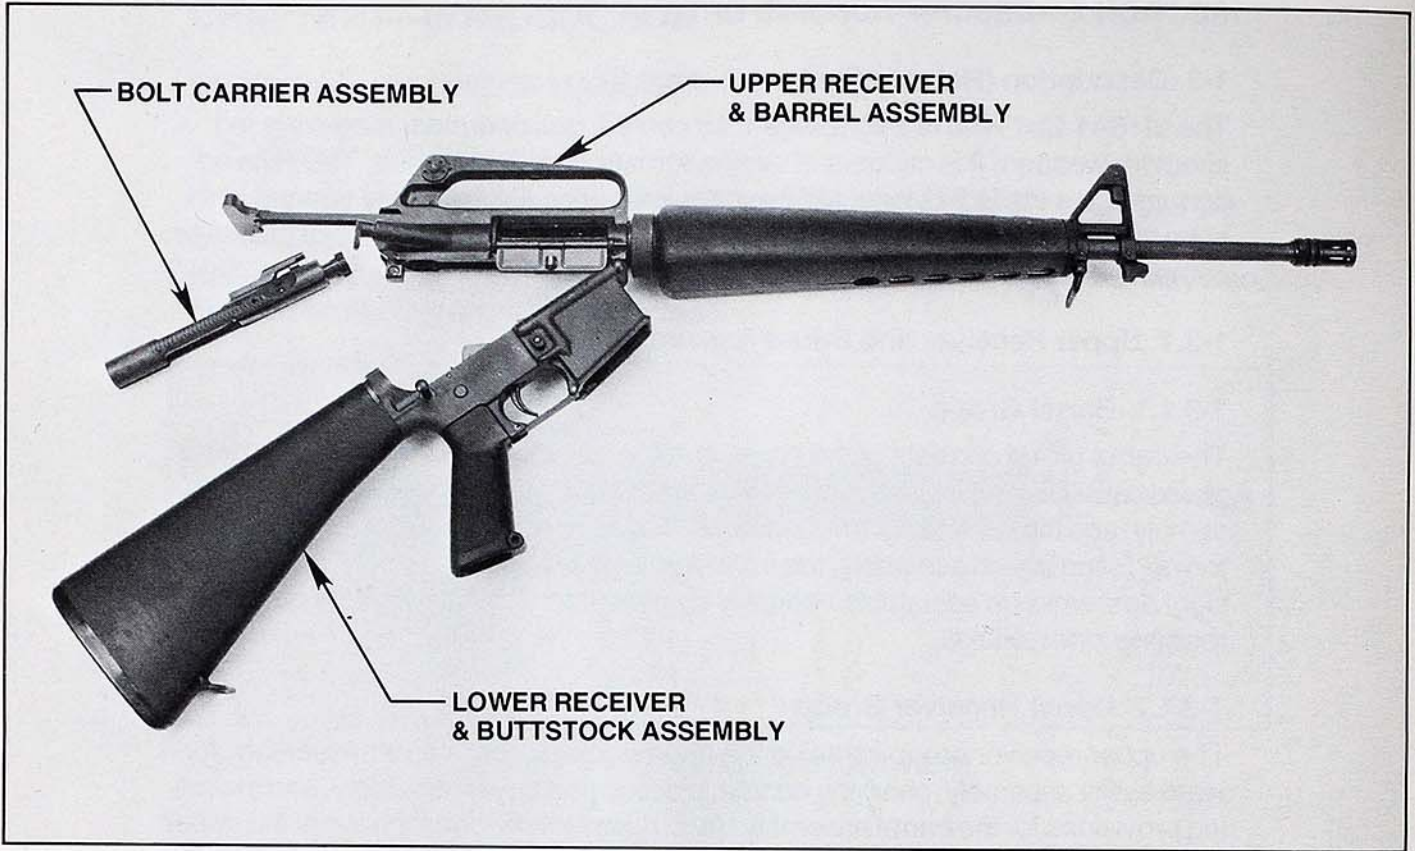


FIGURE 1-3A. MAJOR GROUPS OF RIFLE

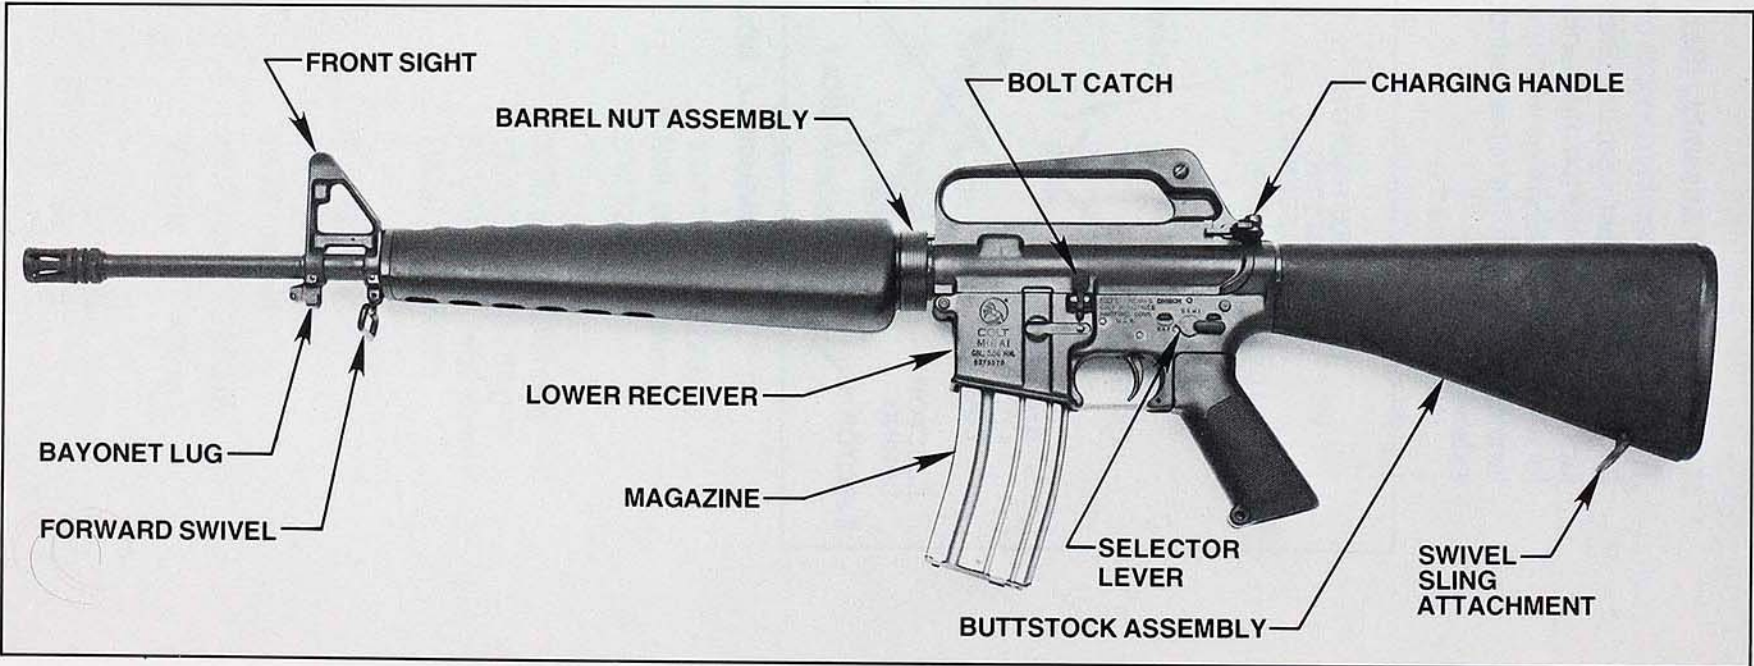
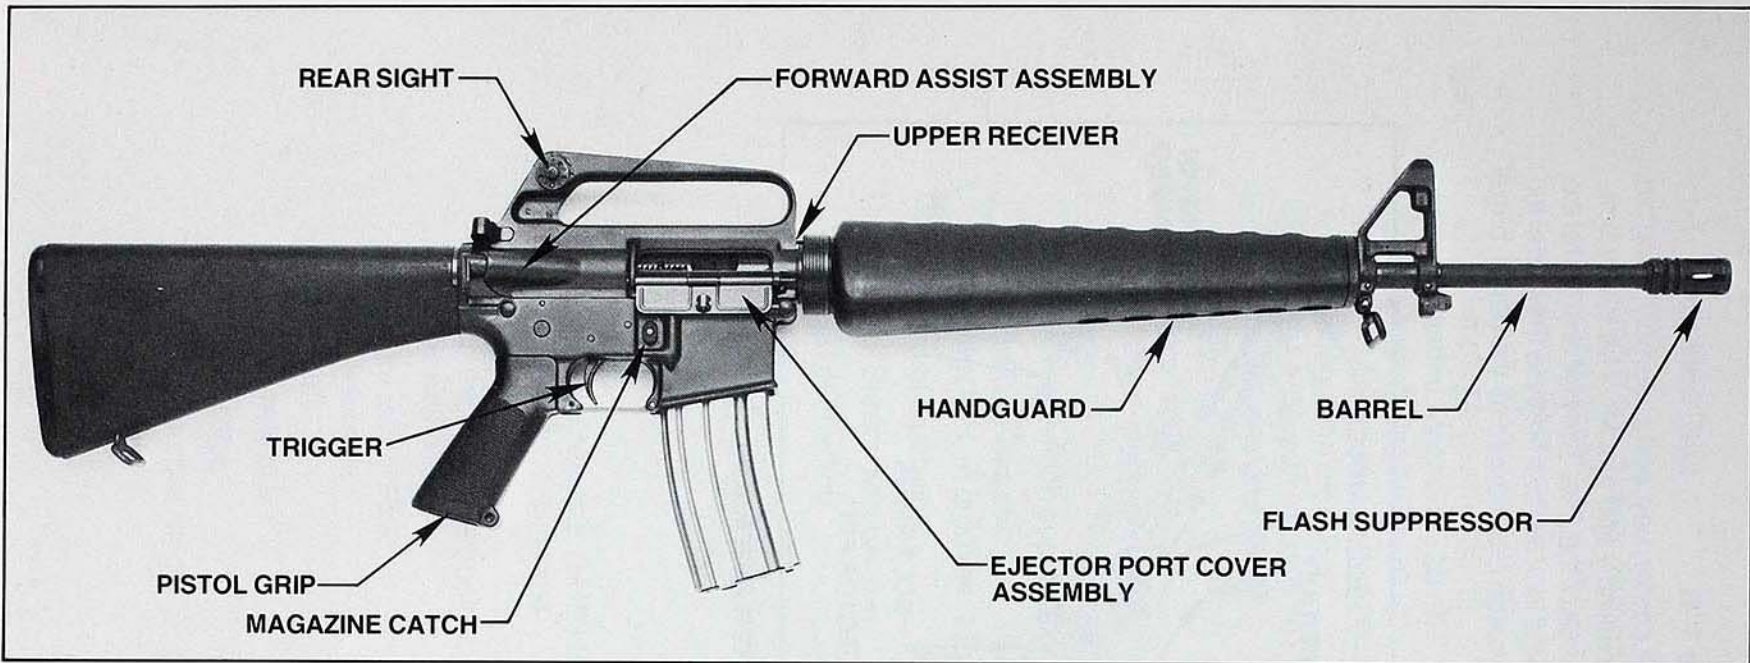


FIGURE 1-3B. RIFLE PARTS

1-3.3 Bolt Carrier Assembly (See Figure 1-4)

The bolt carrier assembly consists of the bolt carrier, key, bolt assembly, firing pin, firing pin retaining pin, cam pin, extractor assembly and ejector. The rotary bolt locking action is one of the mechanical features of the rifle. The bolt and barrel extension contain locking lugs which engage and lock the bolt firmly to the barrel extension. The initial force of the cartridge explosion is absorbed by the barrel, barrel extension, and bolt.

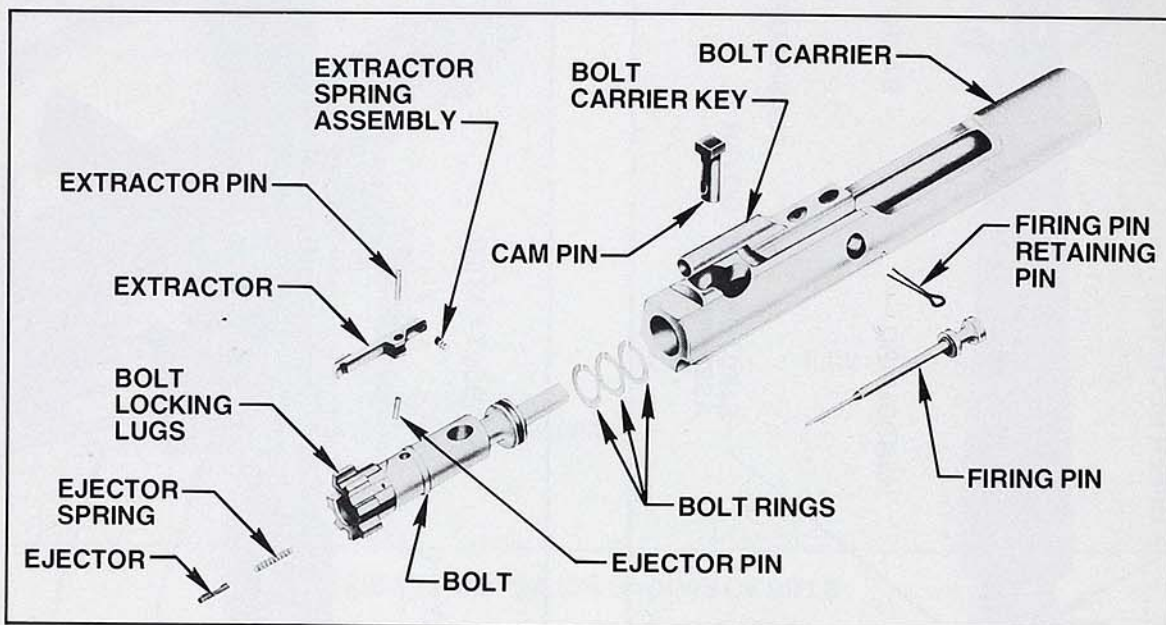


FIGURE 1-4. BOLT CARRIER ASSEMBLY.

1-4. Tabulated Data

Weight:

| | | |
|--|----------|---------|
| M16A1 Rifle—Empty (without magazine and sling) | 7.0 lb. | 3.2 kg |
| Sling (Silent) | 0.4 lb. | 0.18 kg |
| Empty Magazine (20 rd) | 0.16 lb. | 0.07 kg |
| Empty Magazine (30 rd) | 0.25 lb. | 0.11 kg |
| Loaded Magazine (20 rd) | 0.7 lb. | 0.32 kg |
| Loaded Magazine (30 rd) | 1.0 lb. | 0.45 kg |
| M16A1 Rifle with Loaded 20 rd magazine and Sling | 8.1 lb. | 3.64 kg |
| M16A1 Rifle with Loaded 30 rd magazine and Sling | 8.4 lb. | 3.78 kg |

Length:

| | | |
|-------------------------------|--------|--------|
| Overall with flash suppressor | 39 in. | 0.99 m |
| Barrel | 20 in. | 0.51 m |
| Barrel with flash suppressor | 21 in. | 0.53 m |

Mechanical Features:

| | | |
|---|--------|--------|
| Rifling, R.H., 6 grooves, 1 turn in | 12 in. | 0.30 m |
|---|--------|--------|

| | |
|--------------------------|---------------|
| Method of Operation | Gas |
| Type of Breech Mechanism | Rotating Bolt |
| Method of Feeding | Magazine |
| Cooling | Air |

Ammunition:

| | |
|---------|-------------------------------|
| Caliber | 5.56 mm (cal .223) |
| Type | Ball, blank, dummy and tracer |

Firing Characteristics: (M193 Ball)

| | | |
|--------------------------|--------------------|-------------------------|
| Muzzle Velocity (approx) | 3250 ft/sec | 991 m/s |
| Muzzle Energy | 1270 ft-lb | 175 kg-m |
| Chamber Pressure (max) | 52,000 psi | 3656 kg/cm ² |
| Cyclic rate of fire | 700 to 950 rds/min | |

Maximum rate of Fire:

| | |
|---------------|-----------------|
| Semiautomatic | 45/65 rds/min |
| Automatic | 150/200 rds/min |

| | |
|------------------------|---------------|
| Sustained rate of fire | 12/15 rds/min |
|------------------------|---------------|

| | | |
|---------------|----------|--------|
| Maximum range | 2902 yds | 2653 m |
|---------------|----------|--------|

| | | |
|-------------------------|---------|-------|
| Maximum effective range | 503 yds | 460 m |
|-------------------------|---------|-------|

CHAPTER II—OPERATION

Section 1—Cycle of Operation

2-1. Cycle of Operation

The cycle of operation of the M16A1 Rifle is described as follows:

2-1.1 Cocking (before firing)

The Rifle is cocked before firing by pulling the charging handle rearward which pulls the bolt carrier group to the rear. As the carrier moves rearward, it cocks the hammer. If an empty magazine is installed at the time of cocking, the magazine follower will actuate the bolt catch to hold the carrier to the rear. If a loaded magazine is installed in the gun or the magazine is removed, the bolt catch must be manually operated to hold the bolt to the rear.

2-1.2 Feeding and Chambering

To feed a cartridge into the chamber, the bolt carrier group must be pulled to the rear by the charging handle or held there by the bolt catch. With a loaded magazine installed, the charging handle or the bolt catch is released and the action spring drives the carrier forward. As the carrier moves forward, the lugs of the bolt pick up a cartridge from the magazine (See Figure 2-1, page 8) and feeds it into the chamber. (See Figure 2-2, page 8). As the bolt locking lugs enter the barrel extension, the ejector is compressed against the left side of the cartridge head and the extractor snaps into the extractor groove on the right side of the cartridge.

2-1.3 Locking (See Figure 2-3, Page 9)

When the forward motion of the bolt and cartridge are stopped by the chamber, the bolt carrier continues forward until it is stopped by contact with the rear face of the barrel extension. This last portion of the forward travel of the carrier rotates the bolt through the action of the cam slot in the carrier on the cam pin in the bolt. This engages the bolt lugs with the barrel extension lugs to lock the bolt in battery. The bolt, when locked, is said to be "closed".



FIGURE 2-1. FEEDING



FIGURE 2-2. CHAMBERING

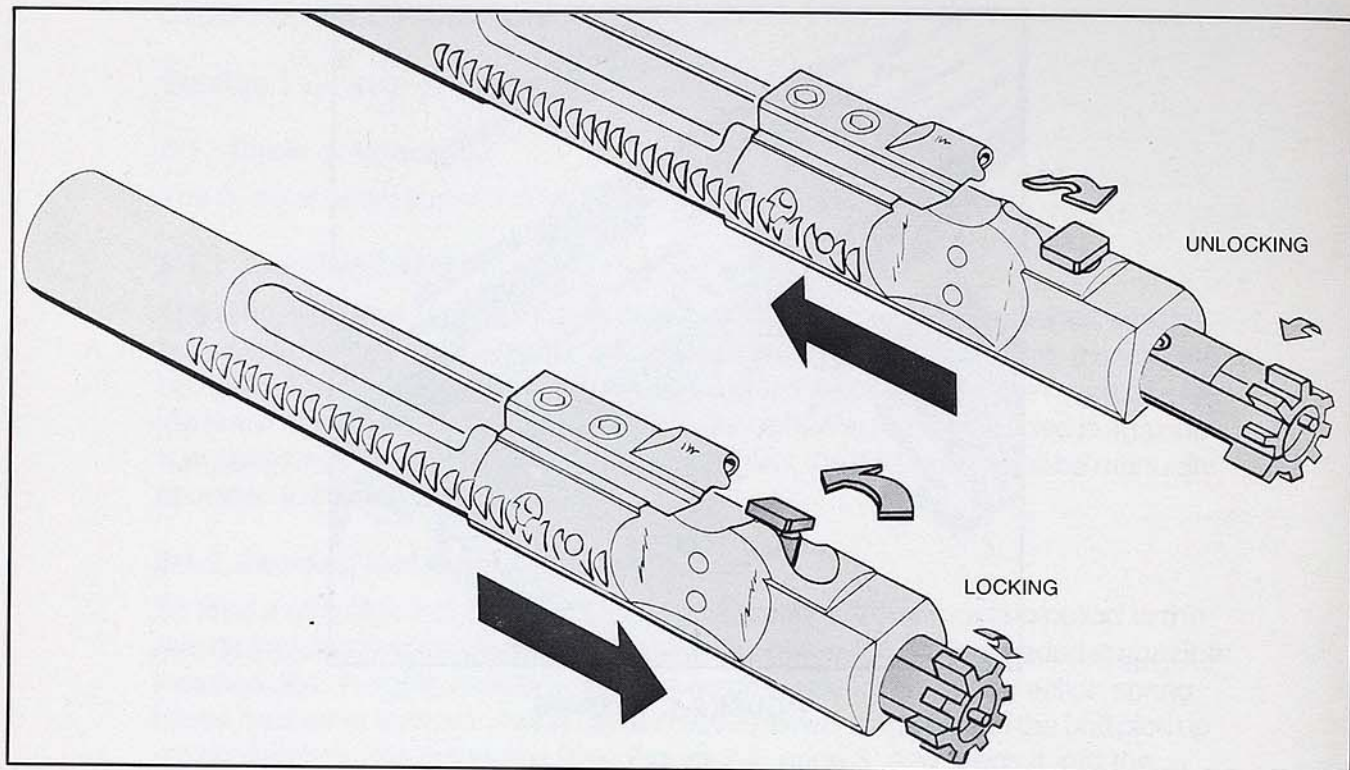


FIGURE 2-3. LOCKING

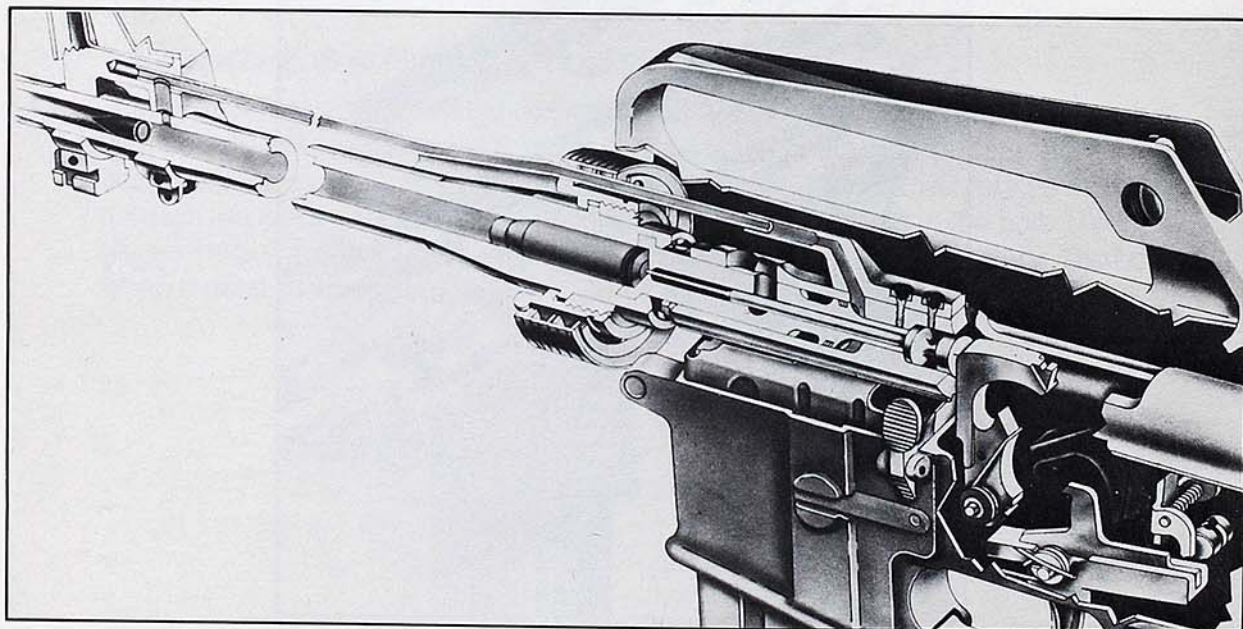


FIGURE 2-4. FIRING

2-1.4 Firing

With the fire control selector, located on the left side of the lower receiver (Figure 2-10, page 15) set to either "auto" or "semi" the Rifle may be fired. When the trigger is pulled, it causes the sear to release the hammer. The hammer spring then drives the hammer against the firing pin, which then strikes the cartridge primer to discharge the chambered round. (Figure 2-4, Page 9)

2-1.5 Unlocking (See Figure 2-3, page 9)

As the pressure of the gas generated by the burning propellant drives the projectile down the barrel and past the gas port, a small quantity of the gas is bled off through the gas port, gas tube, and bolt carrier key into a cylindrical section in the bolt carrier where it expands and drives the bolt carrier rearward. During the first rearward travel of the carrier, the bolt is rotated by the cam pin acted on by the bolt carrier cam slot. This rotation disengages the bolt lugs from the barrel extension lugs so the bolt is unlocked. The carrier then continues rearward with the unlocked bolt.

2-1.6 Extraction (See Figure 2-5, page 11)

As the bolt is moved rearward by the carrier, the extractor, which is engaged in the extractor groove of the fired cartridge case and is pinned to the bolt, withdraws the spent case from the chamber.

2-1.7 Ejection (See Figure 2-6, page 11)

As soon as the extractor has drawn the spent case out of the chamber, the spring loaded ejector, acting against the left side of the case head, pushes the spent case out of the ejection port which is located on the right side of the upper receiver.

2-1.8 Cocking (after firing)

As the carrier group continues rearward in recoil, it compresses the action spring and cocks the hammer. Two different actions now take place dependent upon whether the fire control selector is set on SEMI (semiautomatic) or AUTO (automatic). These actions are as follows:

2-1.8.1 SEMI (semiautomatic)

When the trigger is pulled, the firing action of the Rifle is so much faster than human reaction that it would be impossible to release the trigger quickly enough to prevent several shots being fired. For this reason, a disconnect is used to catch and hold the hammer until the trigger is released and pulled a second time when the fire control selector is in the semiautomatic position. When the trigger is pulled, the disconnect is rotated forward by the action of the disconnect spring. As the hammer is cocked by the recoil action of the carrier group, the hook of the disconnect engages the upper inside notch of the hammer, holding it to the rear. (Figure 2-8, page 13).

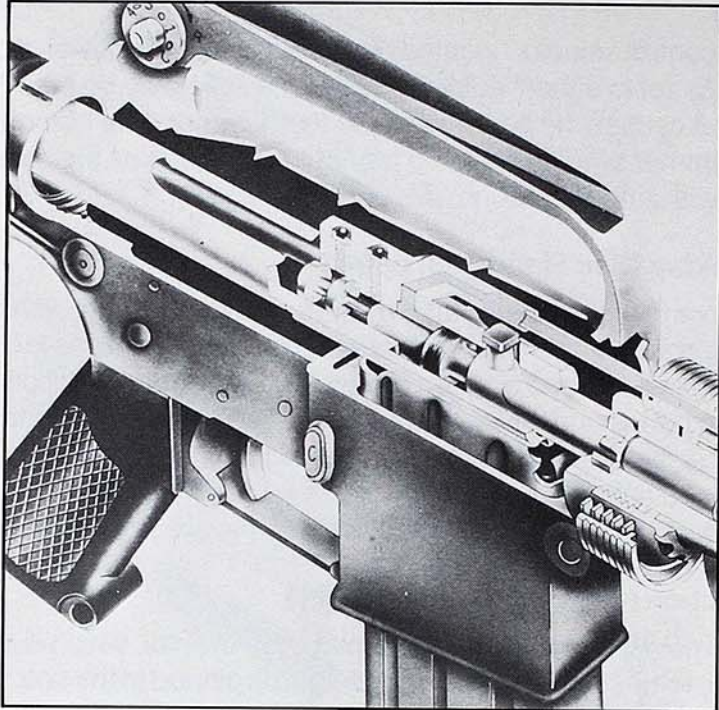


FIGURE 2-5. EXTRACTING

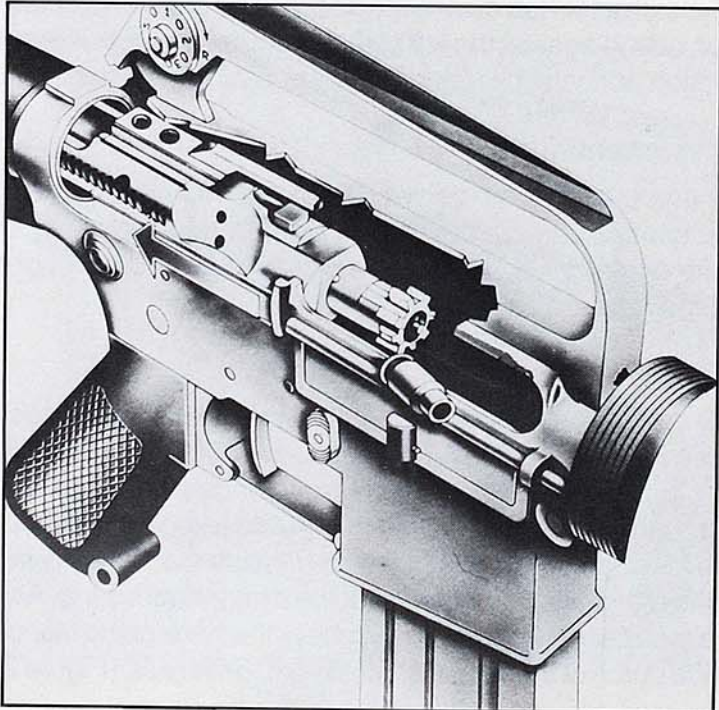


FIGURE 2-6. EJECTING

When the trigger is released, the trigger spring returns the trigger to its normal position rotating the disconnect back with it. The hammer is thus released from the hook on the disconnect. However, before the disconnect hook actually releases the hammer, the trigger sear surface has moved in front of its hammer notch so that the hammer drops from the disconnect sear to the trigger sear. The Rifle is then ready for a second shot.

2-1.8.2 AUTO (automatic) (See Figure 2-9, page 14)

When the fire control selector is set on AUTO and the trigger is pulled, the trigger sear releases the hammer. The disconnect is prevented from moving forward to engage the hammer by a cam on the fire control selector. After the first shot, as the hammer is being cocked by the recoil action of the carrier group, the notch on the top outside edge of the hammer is engaged by the automatic sear. The hammer is then held in the cocked position by the automatic sear until the bolt carrier strikes the upper edge of the automatic sear in counter-recoil, causing it to release the hammer near the end of the forward travel of the carrier. The hammer then falls to fire the next round. This cycle repeats until the magazine is emptied or the trigger is released. When the trigger is released, the hammer falls from the automatic sear but is held by the trigger sear, thus ending the cycle of automatic fire.

2-1.9 Buffering

The rearward or recoil movement of the carrier group is arrested by the buffer assembly acting against the bottom of the receiver extension. (See Figure 3-5, page 36).

2-1.10 Counter-Recoil

After buffering the action spring forces the carrier forward toward the chamber.

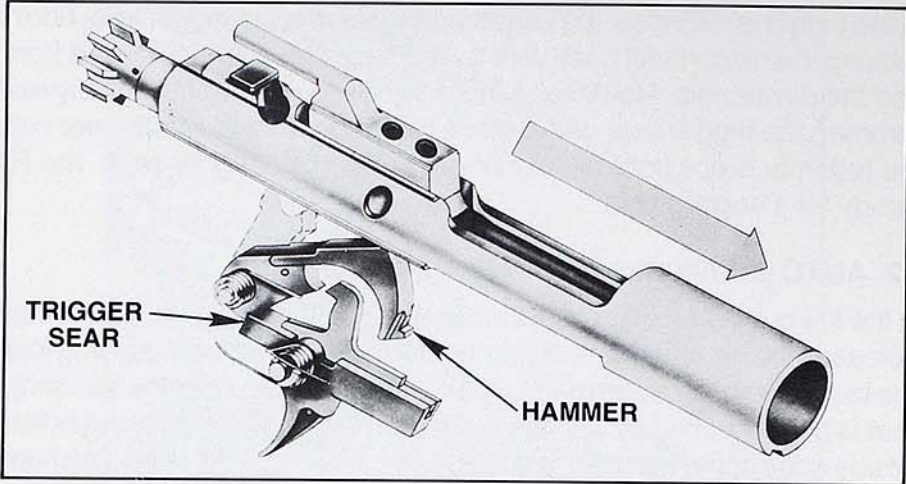


FIGURE 2-7. NORMAL COCKING

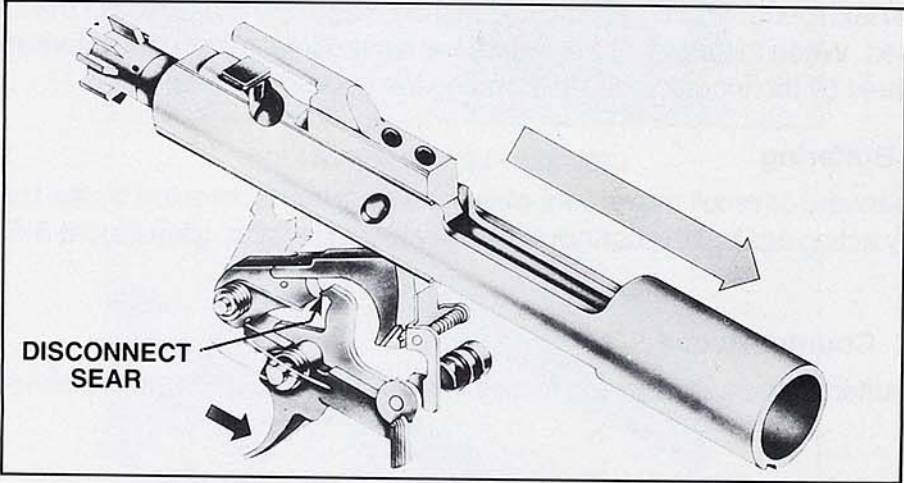


FIGURE 2-8. SEMIAUTOMATIC COCKING WITH TRIGGER HELD BACK


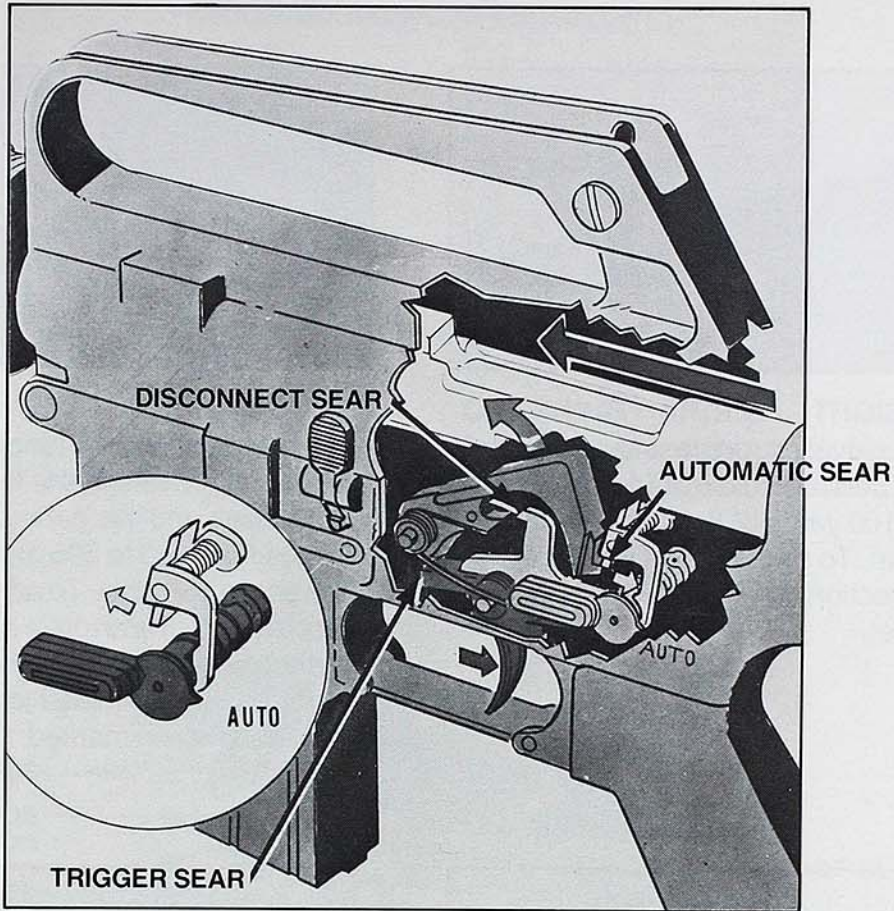


FIGURE 2-9. AUTOMATIC COCKING AND FIRING

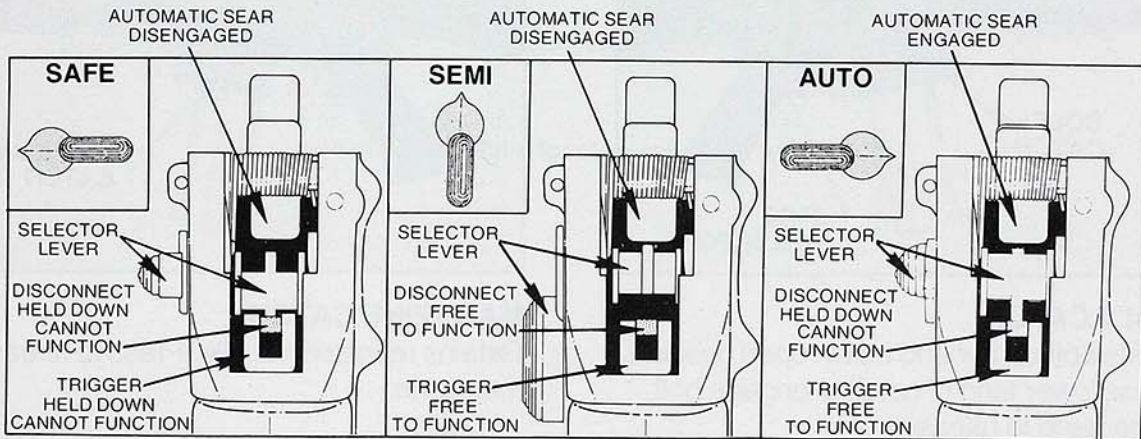


ACTION OF SELECTOR LEVER—CROSS SECTION VIEWS TAKEN BEHIND TRIGGER LOOKING FORWARD

SECTION 2—CONTROLS


2-2. General

This section describes, locates, illustrates, and furnishes the operator with information pertaining to the various controls provided for the proper operation of the rifle. Refer to Figure 2-10, page 15 for controls and their functions.


FIGURE 2-10. RIFLE CONTROLS

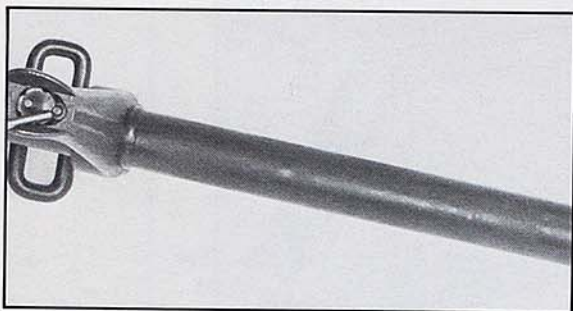**FRONT SIGHT**

To adjust elevation, depress detent and rotate post. Each notch moves point of impact 1 inch at 100 yards (2.8 cm at 100 meters) up or down. To raise point of impact, turn post in direction marked "UP" on sight (clockwise).

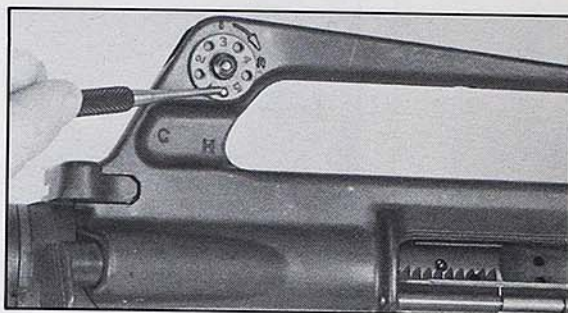**REAR SIGHT**

Has two apertures for range. The unmarked or forward leaf is for ranges up to 300 meters and the leaf marked "L" is for ranges from 300 to 500 meters (approx. 330 yds to 550 yds). To adjust windage, depress detent and rotate drum. Amount of correction per notch is same as front sight. To move point of impact to right, turn drum in direction marked "R" on sight (clockwise).

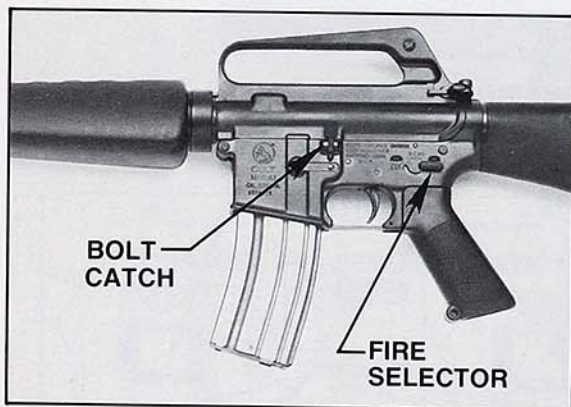**BOLT CATCH**

Holds bolt carrier and bolt in open position. Press lower tang of catch to engage bolt, upper tang to release.


FIRE CONTROL SELECTOR

Used to select SAFE position and SEMIautomatic or AUTOMATIC fire modes.

**MAGAZINE CATCH**


Retains magazine in rifle. Press to release magazine.

FIGURE 2-10. RIFLE CONTROLS (CONT.)

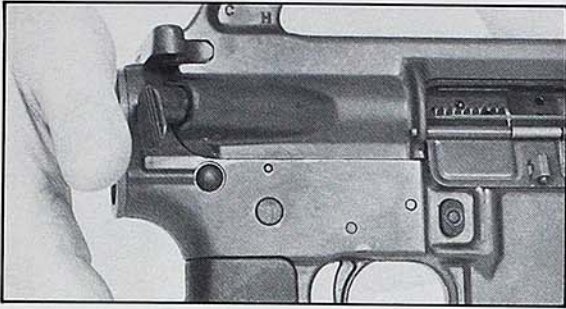


FORWARD ASSIST ASSEMBLY

If bolt fails to close and lock, press forward assist until bolt is moved into locked position.

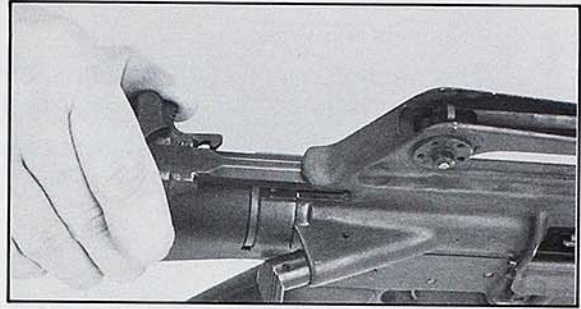

CHARGING HANDLE

Retracts bolt carrier and bolt. Has a thumb latch to hold it in forward position.

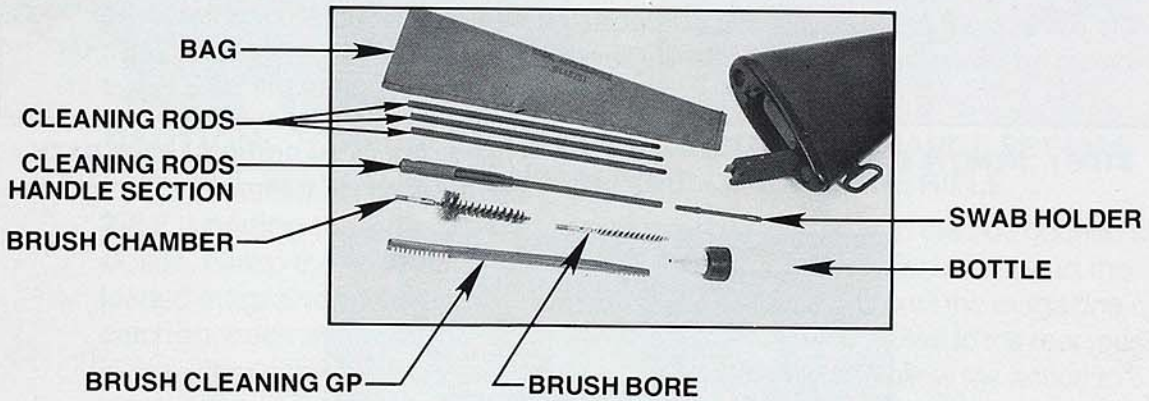

BUTTSTOCK

Has stowage cavity for cleaning materials.


SECTION 3—OPERATING INSTRUCTIONS—USUAL CONDITIONS

2-3. General

This section contains instructions for the operation of the Rifle under usual conditions which are defined as conditions of moderate temperatures and humidity. Instructions for operation under unusual conditions are covered in Section 4, page 23.

2-4. Clearing Rifle


2-4.1 Clear Rifle as shown in Figure 2-11.

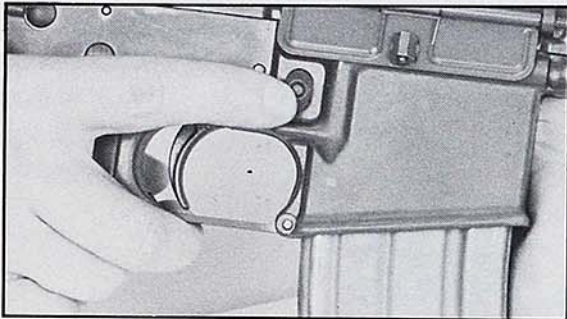

STEP 1. REMOVE MAGAZINE.



STEP 2. PULL CHARGING HANDLE BACK AND INSPECT CHAMBER.

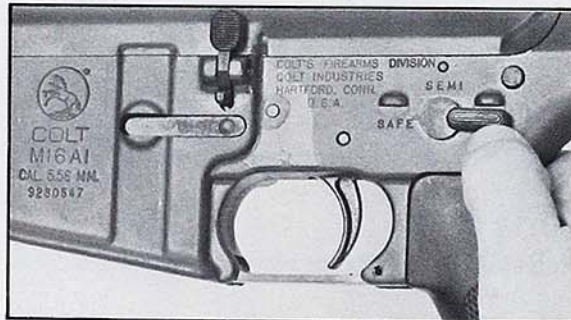

STEP 3. SET SELECTOR LEVER IN SAFE POSITION.

FIGURE 2-11. CLEARING RIFLE

2-4.2 Clean and lubricate as indicated in Section 7, page 28.

2-5. Loading

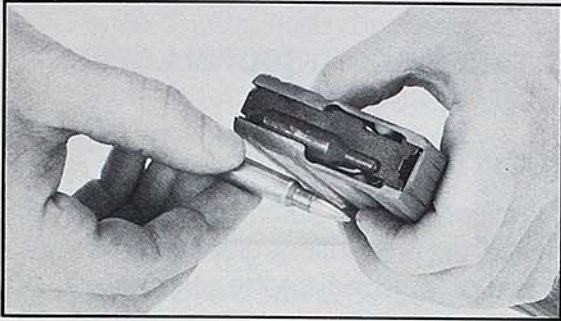


FIGURE 2-12. MAGAZINE LOADING, CARTRIDGE ORIENTATION.

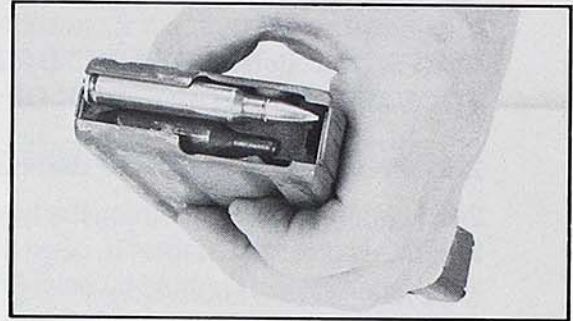


FIGURE 2-13. MAGAZINE LOADED, FIRST CARTRIDGE.

2-5.1 Loading the Magazine. Some 20 round magazines may still be in use but the standard magazine has a capacity of 30 rounds and may be loaded with any amount up to capacity. The magazine follower has a raised portion resembling the outline of a cartridge. Cartridges are loaded into the magazine so that the tips of the bullet point in the same direction as the smaller end of the raised portion of the follower (See Figure 2-12 and 2-13 above).

CAUTION: TO REDUCE RISK OF ACCIDENTAL DISCHARGE SET FIRE CONTROL SELECTOR TO SAFE BEFORE LOADING THE RIFLE.

2-5.2 Loading the Rifle. The magazine may be inserted with the bolt opened or closed. Grasp the pistol grip, point the muzzle in a safe direction, and insert the loaded magazine into the magazine housing. Push upward until the magazine catch engages and holds the magazine. If the bolt carrier is locked to the rear, push in the upper portion of bolt catch (Figure 2-10, page 15) and allow the action to close, chambering a round. If the bolt carrier is in the forward position when the magazine is inserted, pull the charging handle fully to the rear and release it.

NOTE: Do not “ride” the charging handle forward with the hand. If the charging handle is eased forward from the open position, the bolt may fail to close fully and lock. If the bolt fails to lock, use the forward assist assembly (Figure 2-10, page 16).

The Rifle is now loaded and can be fired with the fire control selector placed in the "Auto" or "Semi" position.

CAUTION: IF NOT READY TO FIRE, SET THE FIRE CONTROL SELECTOR TO "SAFE" TO REDUCE RISK OF ACCIDENTAL DISCHARGE.

2-6. PRECAUTIONS IN FIRING AMMUNITION

2-6.1 Information concerning the type of ammunition which is authorized for use in the Rifle is given in Chapter V, page 62. In addition, the precautions given in the following paragraphs should be closely observed in order to reduce the risk of injury to personnel or damage to material.

2-6.2 Ammunition which is corroded should not be fired.

2-6.3 Cartridge cases are easily dented and should be protected from hard knocks and blows. Dented cartridge cases may jam in the chamber, and cause difficulty in extraction.

2-6.4 Cartridges which have been seriously damaged, or those having loose bullets, should not be used.

2-6.5 Cartridges should be kept clean and free of foreign matter.

2-6.6 Cartridges whose temperature has been raised to 130°F (55°C), (uncomfortable to hold) or more, due to exposure to the sun, or other sources of heat, should not be fired as dangerously high chamber pressures may result. When returned to lower temperatures, these cartridges should be safe to fire.

2-6.7 If a cartridge remains in the chamber of a very hot weapon at any time firing is interrupted, the cartridge should be removed immediately or there should be a 15-minute wait to prevent the possibility of injury to personnel in the event of a cartridge cook-off (see Paragraph 2-9, page 21).

CAUTION: IF A NOTICEABLE DIFFERENCE IN SOUND OR RECOIL IS EXPERIENCED STOP FIRING. A BULLET COULD BE STUCK IN THE BARREL.

In such instances, the bolt should be retracted slowly to remove and identify the fired cartridge case. The weapon should be cleared and examined for the presence of unburned propellant grains in the receiver, or the possible presence of a bullet remaining in the bore. Any unburned propellant or obstruction in the bore must be removed before firing again.

NOTE: If a bullet is lodged in the bore, the Rifle must be sent to a maintenance facility for proper removal.

2-7. Firing

2-7.1 Fire Control Selector. The Rifle may be fired semiautomatically or automatically by moving the fire control selector (Figure 2-10, page 15) to the desired position as indicated in Paragraphs 2-7.2 and 2-7.3.

2-7.2 SEMIautomatic Position. When the fire control selector is in this position, the Rifle will fire one round each time the trigger is pulled.

2-7.3 AUTOMATIC Position. With the fire control selector in this position, the Rifle will continue to fire until the magazine is empty or the trigger is released. When the Rifle is fired in either SEMI or AUTO, the bolt will lock in open position when the last round from the magazine has been fired.

2-8. Stoppage and Immediate Action

2-8.1 Stoppage. A stoppage is any unintentional interruption in the cycle of functioning. Immediate remedial action must be taken to clear stoppages.

2-8.2 Immediate Action. Immediate action is the action taken to correct a stoppage without analyzing the cause. Immediate action to clear a stoppage in the Rifle is as follows:

2-8.2.1. Strike the forward assist assembly to insure that the extractor has engaged the round. Tap upward on the bottom of the magazine to insure that it is fully seated. Pull the charging handle fully to the rear. Watch for ejection of a complete cartridge or cartridge case.

2-8.2.2. If a cartridge or case is ejected, release the charging handle to feed a new round (do not ride the charging handle forward). Strike the forward assist assembly to assure bolt closure. Attempt to fire the weapon. If the weapon fails to fire, inspect to determine the cause of malfunction and take appropriate action as indicated in Chapter III, Section 5—Trouble Shooting, page 53.

2-8.2.3. If a cartridge or case is not ejected, check for a round in the chamber. If the chamber is clear, release the charging handle to feed a round, strike the forward assist assembly, and attempt to fire. If the weapon still fails to fire, inspect to determine the cause of malfunction and take appropriate action as indicated in Chapter III, Section 5—Trouble Shooting, page 52.

2-8.2.4. If a cartridge or case is seen in the chamber it must be removed before attempting to reload or recycle the rifle. A stuck cartridge or case can usually be removed when the barrel is cool by inserting the cleaning rod into the bore from the muzzle end and tapping lightly.

2-9. Misfires and Cook-Offs

2-9.1 General. The malfunctions described in the following paragraphs are rarely encountered when properly maintained ammunition of the correct type is fired in properly maintained and operated weapons. However, all personnel concerned with the weapon must understand the nature of each kind of malfunction as well as the proper preventive and corrective procedures in order to avoid injury to personnel or damage to property. General precautions for removing chambered cartridges associated with these malfunctions are described in Paragraph 2-9.2, below.

2-9.1.1. Misfires. A misfire is a complete failure to fire which may be due to a faulty firing mechanism in the Rifle or a faulty element in the propelling charge explosive train of the cartridge.

2-9.1.2. Cook-Off. A cook-off is a functioning of any or all of the explosive components of a cartridge chambered in a very hot weapon due to heat from the weapon. To prevent injury from a cook-off, follow precautions in Paragraph 2-9.2.

2-9.2 Precautions. After a failure to fire, the following general precautions, as applicable, must be observed.

WARNING: A COOK-OFF COULD OCCUR ANY TIME AFTER CHAMBERING A ROUND IN A VERY HOT BARREL.

Immediate Action—To prevent damage or injury from cook-off when barrel is very hot, complete the following actions immediately:

2-9.2.1. Remove magazine.

2-9.2.2. Pull charging handle fully rearward. If chamber is empty, lock action open by pressing in bottom of bolt catch. If round remains in chamber, see Step 2-9.2.4.

2-9.2.3. Allow barrel to cool for 15 minutes.

2-9.2.4. If round remains in chamber, release charging handle, allow bolt to move forward and strike forward assist.

2-9.2.5. Fire round if safe to do so. If not safe, see Step 2-9.2.6.

2-9.2.6. If not safe to fire—lay Rifle on the ground pointing in a safe direction with ejection port toward the ground, and step back.

2-9.2.7. Stand clear and keep others clear, and wait 15 minutes for barrel to cool.

WARNING: COOK-OFF COULD OCCUR DURING THIS COOLING PERIOD.

2-9.2.8. After barrel is cool, remove round from chamber as described on page 17. Then have Rifle checked by the unit armorer before firing again.

2-10. Water in Barrel

WARNING: DO NOT ATTEMPT TO FIRE THE WEAPON IF WATER IS PRESENT IN THE BARREL. IMMERSION DURING FORDING, HEAVY RAIN, OR FOG CAN CAUSE WATER TO BE PRESENT IN THE BARREL.

Observe the following procedures to empty water from the barrel:

NOTE: Make certain the muzzle cap is removed before performing the following procedures.

2-10.1 Point the muzzle down.

2-10.2 Pull the charging handle slightly rearward to vent the barrel, and shake the weapon vigorously to allow water to drain from the muzzle.

2-10.3 Press the forward assist to make sure the round is seated in the chamber and the bolt is locked. The weapon can now be fired.

NOTE: Clean and lubricate in accordance with Chapter III, Section 2, page 31, as soon as possible.

2-11. Unloading

Repeat operation in Figure 2-11, page 17.

SECTION 4—OPERATING INSTRUCTIONS—UNUSUAL CONDITIONS

2-12. General

The following paragraphs cover instructions for operation and maintenance under unusual conditions. See Chapter III, Section 4, page 51 for preventive maintenance instructions to be followed for operation under usual conditions.

2-13. Operation in Extreme Cold

2-13.1 In climates where the temperature is consistently below 0°F, (-18°C) it is necessary to prepare the Rifle for cold-weather operation. The Rifle should be cleaned as described in Chapter III, Section 2 starting on page 31. It should be lubricated as indicated on page 41, but Lubricant Automatic Weapons (LAW) or its equivalent should be used instead of LSA.

2-13.2 Exercise the various controls through their entire range at intervals to keep them from freezing in place and to reduce the effort required to operate them.

2-13.3 Rifles not in use and stored outside must be protected with a proper cover.

2-14. Operation in Extreme Heat

2-14.1 Hot Climates


2-14.1.1. When operating in hot climates, the coating of oil necessary for operation and preservation will dissipate quickly. Inspect the Rifle and bipod frequently, paying particular attention to all hidden surfaces of the bolt carrier group, forward assist assembly and lower receiver components.

2-14.1.2. Perspiration contributes to corrosion because it contains acids and salts. After handling the rifle, clean, wipe dry, and oil using LSA oil or equivalent.


2-14.2 Hot, Dry Climates. Clean and oil the bore of the Rifle more frequently when operating in hot, dry climates.

2-15. Operating in Dusty and Sandy Areas

Clean and lubricate the Rifle more frequently. Exercise particular care to keep sand out of mechanisms when inspecting and lubricating weapon. Shield parts from flying sand or dust with tarpaulins during disassembly and assembly operations. Clean and lubricate after operating the Rifle. Cover end of barrel with protective cap (See Figure 2-14).

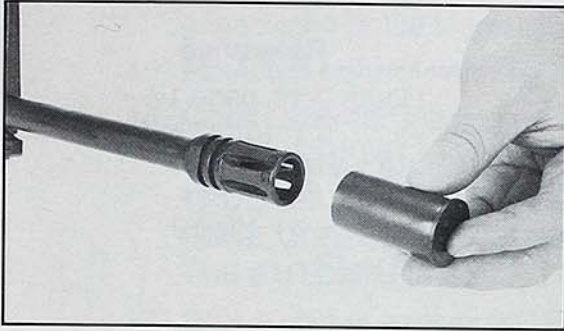

A. INSTALLING PROTECTIVE CAP.

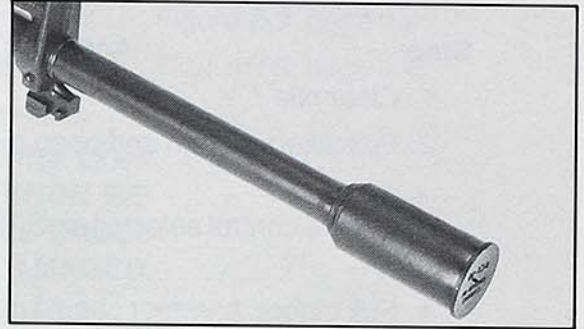

B. PROTECTIVE CAP INSTALLED.

FIGURE 2-14. PROTECTIVE CAP.

2-15.1 Protective Cap Features

2-15.1.1 The cap should be removed before firing the Rifle. However, the cap is designed so that a bullet will pass through the end without affecting accuracy and without causing a safety hazard to the user.

2-15.1.2 Do not place the cap on a hot Rifle. The plastic will become soft and form into the grooves of the flash suppressor making it difficult to remove.

2-16. Operations Under Hot, Rainy or Very Humid Conditions and in Salt Water Areas.

2-16.1 Inspect the Rifle more frequently when operating in hot, moist areas.

2-16.2 When the Rifle is in use, clean and lubricate the bore and chamber and exposed metal surfaces more frequently than prescribed for normal service. A very thin film of oil is prescribed for the chamber and bore.

2-16.3 Moist and salty atmospheres have a tendency to mix with oil and grease and destroy their rust preventive qualities. Inspect all parts frequently for rust or corrosion.

2-16.4 When the Rifle is not in use, cover all metal surfaces with a film of LSA oil or equivalent.

SECTION 5—FUNCTIONAL CHECK

2-17. General

A complete functional check of the Rifle consists of checking its operation with the fire control selector in the SAFE, SEMI and AUTO positions. The following is a rapid, complete check. Any portion of the check may be used separately to determine the operational condition of any specific selector position.

| Step | Action | Reference |
|------|--|------------------------------------|
| 1 | Clear rifle | Figure 2-11, page 17 |
| 2 | Pull takedown pin and open receivers. | Figure 3-1, Steps 1 and 2, page 32 |
| 3 | Set fire control selector on SAFE. | Figure 2-11, Step 3, page 17 |
| 4 | Pull trigger, hammer should <i>not</i> fall. | |
| 5 | Set fire control selector on SEMI. | Figure 2-9, page 14 |
| 6 | Pull trigger, hammer should fall. | |
| 7 | Hold trigger to rear, recock hammer manually, hammer should be engaged by disconnect. | Figure 2-8, page 13 |
| 8 | Release trigger, hammer should be released by disconnect and drop to engagement by the trigger sear. | Figure 2-7, page 13 |
| 9 | Set fire control selector on AUTO. | Figure 2-9, page 14 |
| 10 | Pull trigger, hammer should fall. | |
| 11 | Hold trigger to rear and manually cock hammer, hammer should be engaged by automatic sear. | Figure 2-9, page 14 |
| 12 | With trigger still held to rear, push top of automatic sear forward, hammer should drop. | Figure 2-9, page 14 |

| Step | Action | Reference |
|------|---|----------------------|
| 13 | With trigger still held to rear, manually cock hammer, hammer will be engaged by automatic sear. | Figure 2-9, page 14 |
| 14 | Release trigger and push top of automatic sear forward, automatic sear should release hammer and hammer should drop to engagement with the trigger sear. | Figure 2-9, page 14 |
| 15 | Move fire control selector to SAFE. | Figure 2-9, page 14 |
| 16 | Close receivers and engage takedown pin. | |
| | CAUTION: FAILURE TO MOVE FIRE CONTROL SELECTOR TO SAFE POSITION BEFORE CLOSING RECEIVERS WILL CAUSE THE AUTOMATIC SEAR TO BE DAMAGED. | |
| 17 | Set fire control selector on SEMI, and pull trigger, hammer should drop. | |
| 18 | Install an empty magazine and check that it is locked in place by the magazine catch. | Para. 2-5, page 18 |
| 19 | With the empty magazine installed and the fire control selector set on SEMI or AUTO, pull charging handle back and then release same. Bolt carrier assembly should be held to the rear by engagement of the bolt with the bolt catch. | |
| 20 | Push top of bolt catch to release bolt and bolt carrier. The bolt and carrier assembly should move forward into the locked position. | Figure 2-10, page 15 |
| 21 | Set fire control selector on SAFE. | Figure 2-11, page 17 |
| 22 | Close ejection port cover. | Figure 1-3, page 4 |
| 23 | Install protective cap. | Figure 2-14, page 24 |

SECTION 6—PRE-ISSUE SERVICE

2-18. General

To determine whether the Rifle and the other basic issue items have been properly prepared for service by the supplying organization, and to be sure they are in proper condition to be functioned, the following service is recommended.

2-19. Pre-issue Service Check List

| Step | Action | Reference |
|------|---|---------------------------------------|
| A | Check to determine that all basic issue items have been furnished. | Para's 3-1, page 29, and 3-2, page 30 |
| B | Clear Rifle | Figure 2-11, page 17 |
| C | Open receivers. | Figure 3-1, Steps 1 and 2, page 32 |
| D | Remove bolt carrier assembly from Rifle. | Figure 3-2, page 33 |
| E | Visually inspect bolt carrier assembly for proper assembly, damaged, or missing parts. | |
| F | Clean, lubricate and reassemble rifle. | Section 2, Chapter III, page 31 |
| | NOTE: Wipe excess oil from barrel bore and chamber. Particular attention should be given to cleaning the bolt carrier key. | |
| G | Hand function Rifle to assure proper operation. | Section 5, page 25 |
| | NOTE: When retracting the bolt carrier group, check that there is free movement between the bolt carrier key and the gas tube. | |

SECTION 7—PRE-FUNCTIONING LUBRICATION**2-20. General**

Prior to operation of the Rifle, the following lubrication procedure is to be performed. The recommended lubricant to be used is Semi-fluid Lubricating Oil (LSA), MIL-L-46000.

2-20.1 Application Areas

| Step | Action | Reference |
|-------------|--|-----------------------|
| A | Coat all components of the lower receiver and the bolt carrier group with a light coating of LSA oil or equivalent using a lightly oiled cotton wiping cloth, cleaning swabs, and pipe cleaners. | |
| B | Apply a drop of LSA oil or equivalent in the mouth of the bolt carrier key. | Figure 3-12J, page 43 |
| C | Apply a drop of LSA oil or equivalent in each of the bolt carrier exhaust ports. | Figure 3-12K, page 43 |

CHAPTER III—OPERATOR AND UNIT MAINTENANCE INSTRUCTIONS

SECTION 1—TOOLS AND MATERIAL REQUIRED FOR MAINTENANCE

3-1. Operator Maintenance Tools and Material

The tools and material needed by the operator to perform the required maintenance functions are as follows:

| Item No. | Description | Page No. |
|----------|--|----------|
| 1 | Brush, Cleaning: Bore (p/n 94144) | 69 |
| 2 | Brush, Cleaning: Chamber. (p/n 94145) | 69 |
| 3 | Cleaner, Tobacco Pipe | |
| 4 | Cleaning Compound, Rifle Bore: Small Arms bore cleaner (U.S. Fed Spec P-C-111 or equivalent) | |
| 5 | Lubricating Oil, Semi-Fluid (LSA) MIL-L-46000) | |
| 6 | Lubricating Oil, Automatic Weapons (LAW) (MIL-L-14107) (for operation in extreme cold only) | |
| 7 | Cleaning Compound, Solvent (MIL-C-372) | |
| 8 | Rag, Wiping: Cotton | |
| 9 | Rod, Cleaning, Small Arms (p/n 62684) | 69 |
| 10 | Swab, Small Arms Cleaning | |

Note: The weapon is compatible with and will function properly using any good grade of oil and bore cleaner. The above formulations are recommended only because it is believed they are the best for all firearms, but equivalent materials would be acceptable.

3-2. Unit Maintenance Tools and Material

The tools and equipment required for the unit armorer to perform his maintenance functions are as follows:

| Item No. | Description |
|----------|---|
| 1 | Tools and Material: Listed in Paragraph 3-1, page 29 |
| 2 | Brush, artists: Metal ferrule, flat chisel edge, $\frac{7}{16}$ " width, $1\frac{1}{8}$ " lgth, exposed bristle. |
| 3 | Brush, Cleaning, Tools and Parts. |
| 4 | Cloth, Abrasive: crocus, ferric oxide and quartz. |
| 5 | Lacquer: black (jet) lusterless acrylic nitrocellulose type (touch up) (Spec, Fed, TT-L-50D or MIL-L-19538, Color 37038) or equivalent. |
| 6 | Penetrating Oil: (Spec, FED, VV-P-216) or equivalent. |

SECTION 2—OPERATOR MAINTENANCE PROCEDURES, USUAL CONDITIONS

3-3. General

This section describes maintenance procedures to be performed by the operator under usual conditions. Usual conditions are defined as conditions of moderate temperature and humidity. For additional maintenance procedures to be performed by the operator under unusual conditions, refer to Chapter II, Section 4, page 23.

3-4. Disassembly (Field Stripping)

The extent of disassembly required for the performance of maintenance by the operator is as follows:

| Step Action | Reference |
|---|----------------------|
| A. Clear Rifle. | Figure 2-11, page 17 |
| B. Separate receivers. | Figure 3-1, page 32 |
| C. Remove bolt carrier assembly and charging handle. | Figure 3-2, page 33 |
| D. Disassemble bolt carrier assembly but do NOT disassemble ejector. | Figure 3-3, page 33 |
| E. Remove handguard. | Figure 3-4, page 35 |
| F. Remove buttstock buffer assembly and action spring. | Figure 3-5, page 36 |
| G. Disassemble magazine. | Figure 3-6, page 37 |

3-5. Cleaning

After the Rifle has been field stripped, it is to be cleaned as follows:

3-5.1 Attach the small, bore cleaning brush to the cleaning rod and insert it in the bolt carrier key. Rotate brush clockwise to remove carbon and powder residue. Do **NOT** use any cleaning compound on the brush when cleaning out the key. (See Figure 3-9, page 39).


FIGURE 3-1. RECEIVER SEPARATION PROCEDURE



STEP 1. PUSH TAKE-DOWN PIN TO START.




STEP 2. PULL TAKE-DOWN PIN OUT TO DETENT.

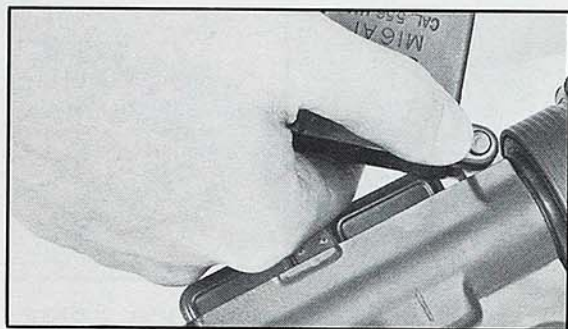

STEP 3. PUSH PIVOT PIN TO START.




STEP 4. PULL PIVOT PIN OUT TO DETENT.

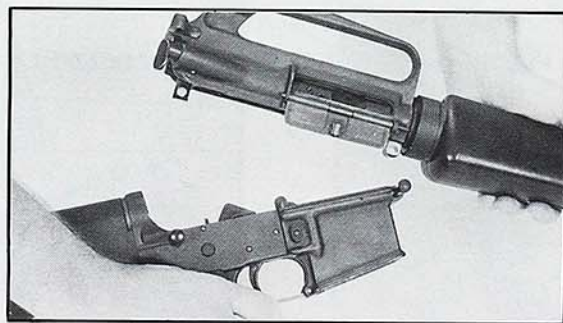


STEP 5. RECEIVERS SEPARATED.


FIGURE 3-2. BOLT CARRIER ASSEMBLY AND CHARGING HANDLE REMOVAL

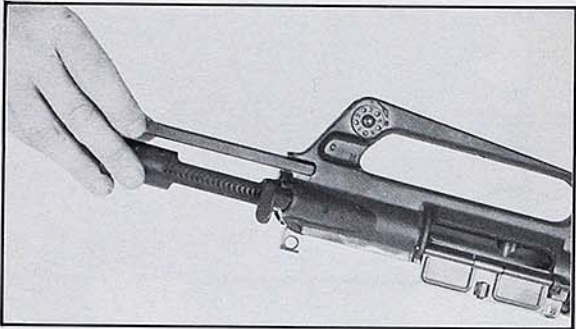

STEP 1. PULL CHARGING HANDLE TO REAR.

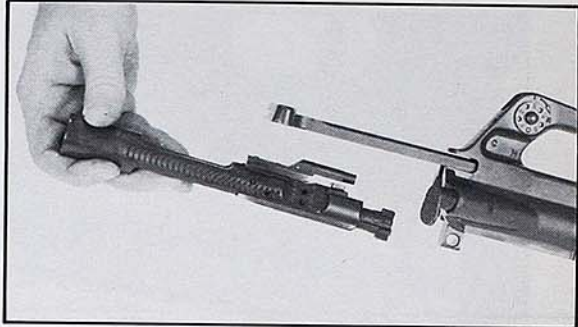


STEP 2. REMOVE BOLT CARRIER ASSEMBLY.

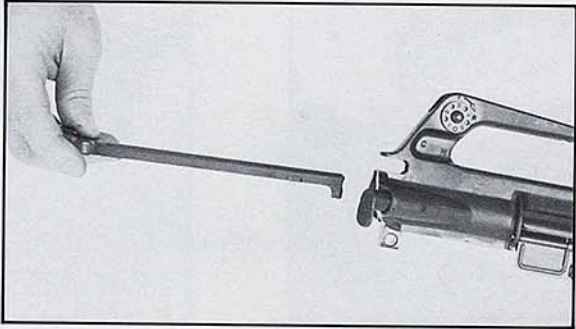


STEP 3. REMOVE CHARGING HANDLE.

FIGURE 3-3. BOLT CARRIER DISASSEMBLY (PART 1 OF 3)

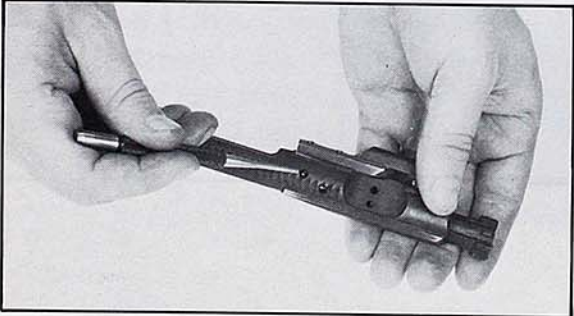


STEP 1. START REMOVAL OF FIRING PIN RETAINING PIN WITH PIN PUNCH.

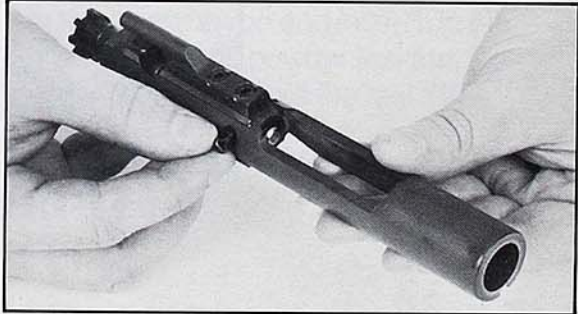


STEP 2. WITHDRAW FIRING PIN RETAINING PIN.


**FIGURE 3-3. BOLT CARRIER DISASSEMBLY
(PART 2 OF 3)**

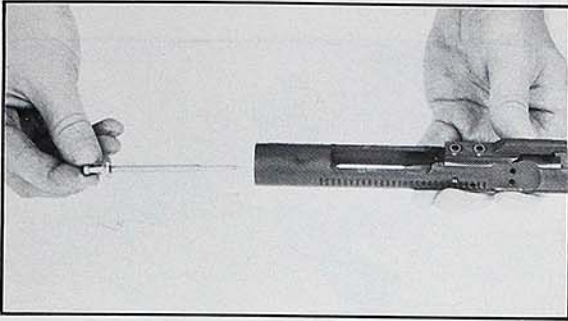


STEP 3. REMOVE FIRING PIN.

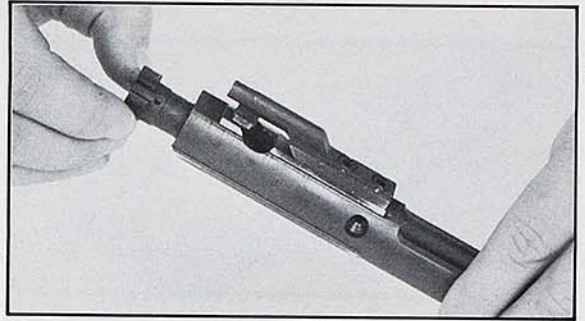


STEP 4. PUSH BOLT TO LOCKED POSITION.

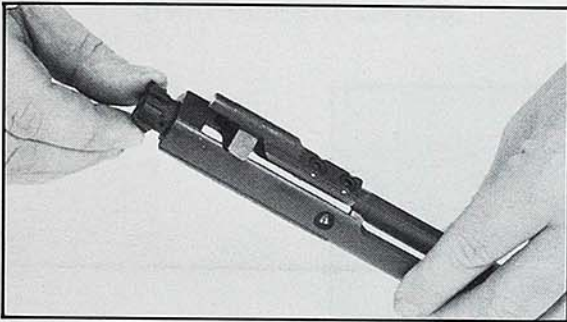


STEP 5. BOLT IN LOCKED POSITION.

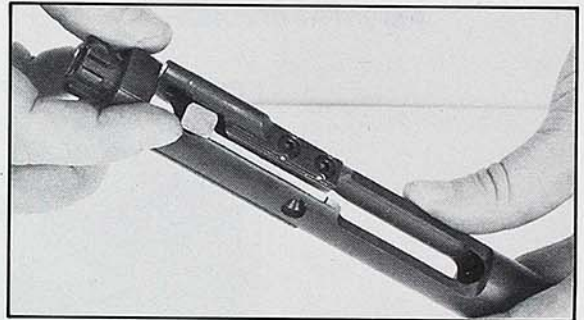


STEP 6. BOLT CAM PIN TURNED 90°.

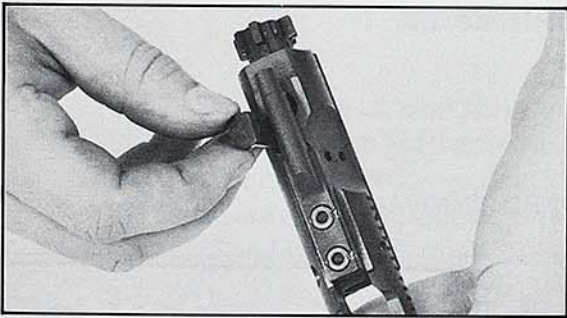


STEP 7. REMOVE CAM PIN.

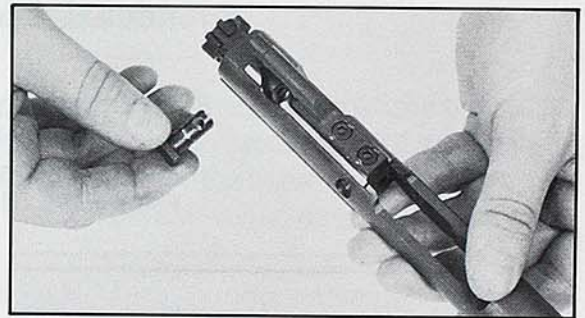

STEP 8. CAM PIN REMOVED.

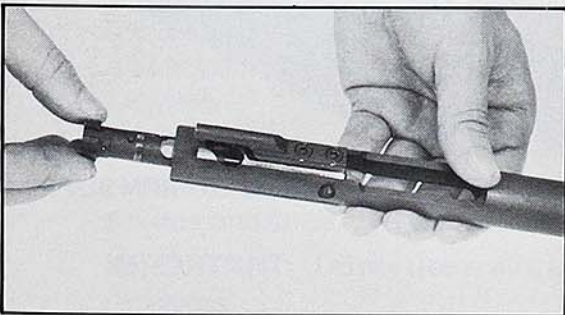


STEP 9. REMOVE BOLT.

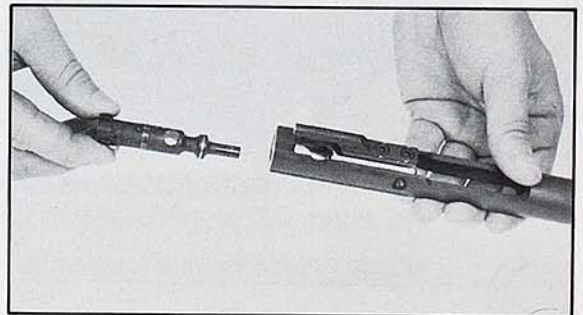


STEP 10. BOLT REMOVED.


**FIGURE 3-3. BOLT CARRIER DISASSEMBLY
(PART 3 OF 3)**

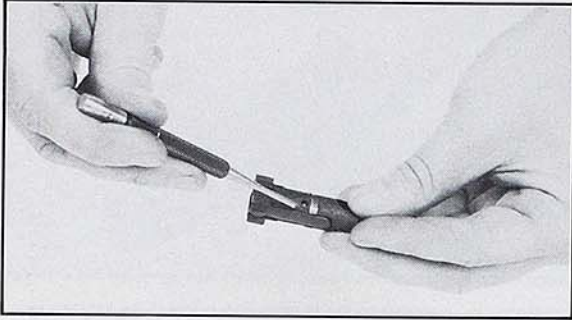

**STEP 11. START REMOVAL OF EXTRACTOR
PIN WITH PIN PUNCH.**

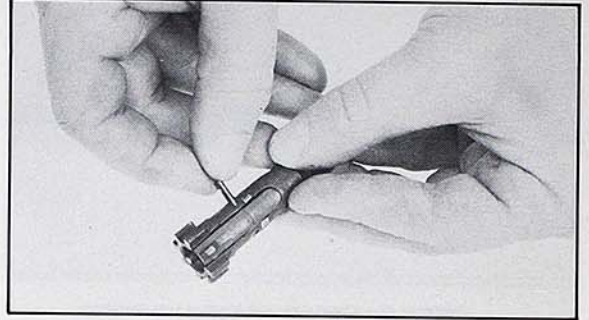


STEP 12. EXTRACTOR PIN REMOVED.

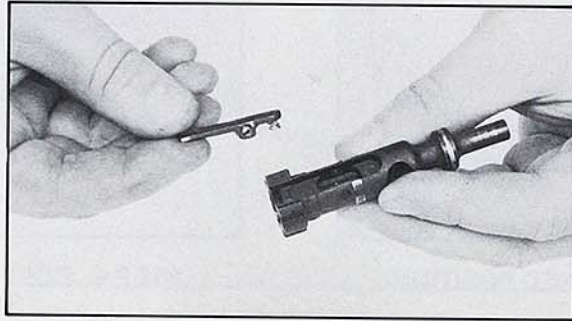


STEP 13. EXTRACTOR REMOVED.

FIGURE 3-4. HANDGUARD REMOVAL.

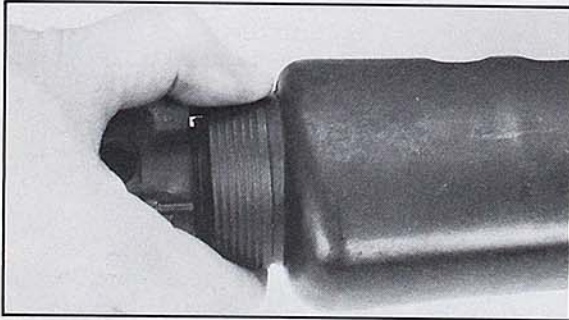


A. PULLING BACK HANDGUARD SLIPRING.

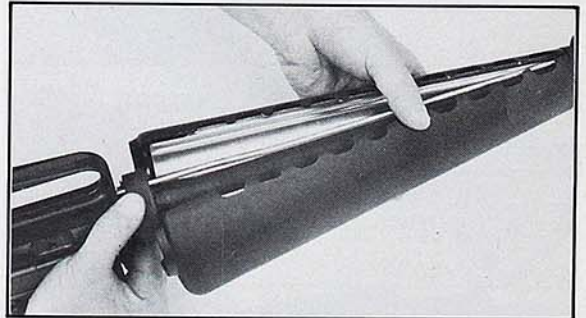


B. HANDGUARDS RELEASED FROM SLIPRING.


FIGURE 3-5. BUFFER AND ACTION SPRING REMOVAL

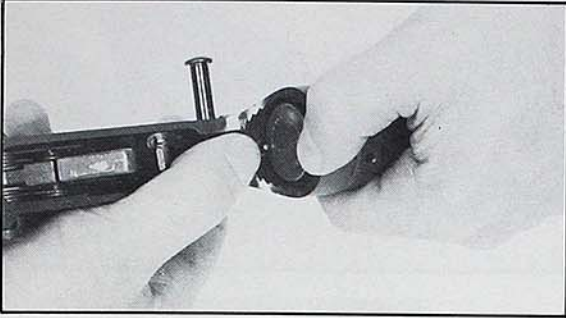

A. BUFFER RETAINER DEPRESSED TO START BUFFER REMOVAL.

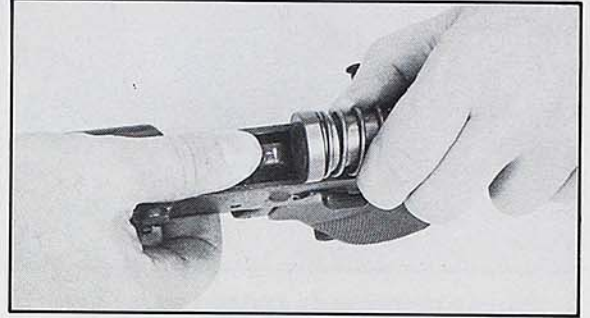

B. HAMMER DEPRESSED TO CONTINUE BUFFER REMOVAL.

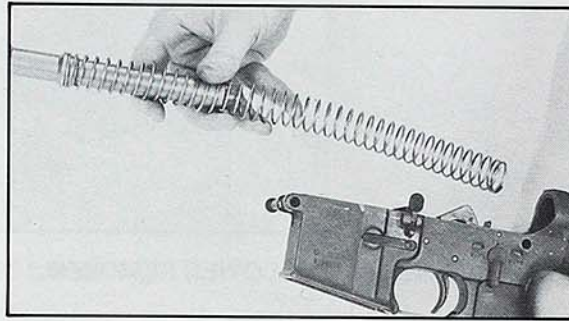

C. BUFFER AND ACTION SPRING REMOVED.


3-5.2 Dip the bore cleaning brush in bore cleaning compound and brush the bore from the chamber end of the barrel. Push the brush through the bore until it extends beyond the muzzle before pulling it back. **NEVER** reverse the brush direction while the brush is in the bore. Continue brushing until the bore is well covered with compound (See Figure 3-8, page 38).

3-5.3 Use the bore cleaning brush wet with bore cleaning compound and clean all carbon and powder residue from around the gas tube in the upper receiver (Figure 3-8b, page 38), the bolt locking lugs (Figure 3-8c, page 38), behind the bolt rings (Figure 3-8d, page 38), the firing pin (Figure 3-8e, page 38), the bolt cam pin (Figure 3-8f, page 38), and inside the bolt carrier from the front (Figure 3-8g, page 38), and from the rear (Figure 3-8h, page 38). Also **carefully** clean the under lip of the extractor.


3-5.4 Attach the large, chamber cleaning brush to the cleaning rod, dip the brush in bore cleaning compound, and clean the chamber. Use a minimum of five plunge strokes and three, 360°, clockwise, rotational strokes (Figure 3-9, page 39).

IMPORTANT: Do not use a wire brush on aluminum surfaces such as the receivers.


FIGURE 3-6. MAGAZINE DISASSEMBLY

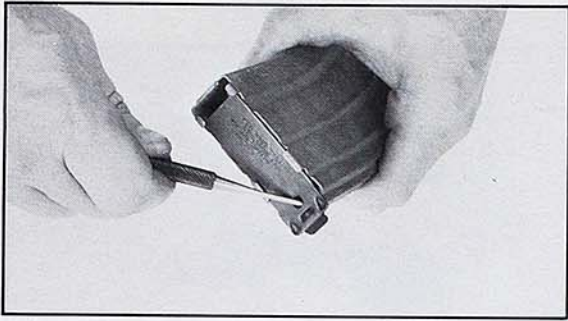

A. BOTTOM PLATE REMOVAL.

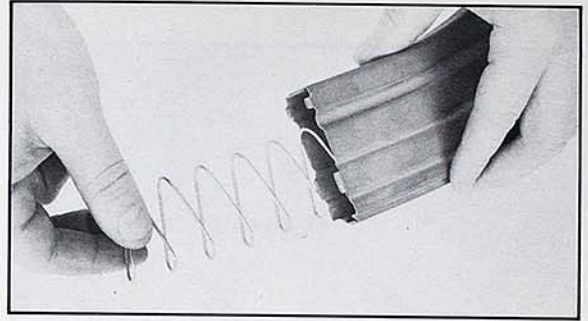

B. SPRING REMOVAL.

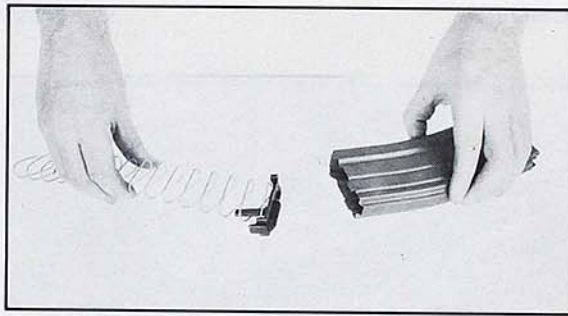

C. SPRING AND FOLLOWER REMOVED.

FIGURE 3-7. MAGAZINE BOX CLEANING



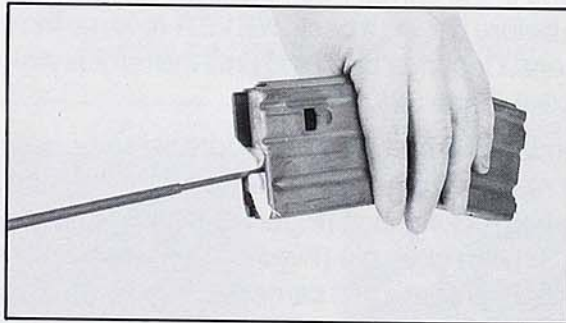



FIGURE 3-8. CLEANING WITH BORE BRUSH

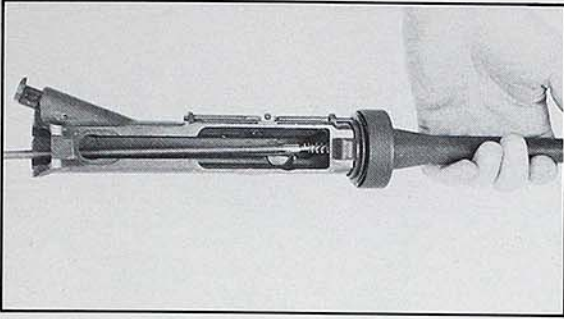


A. THROUGH BARREL.

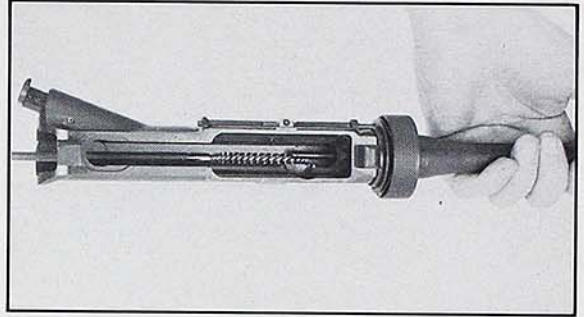


B. LOWER RECEIVER AROUND GAS TUBE.

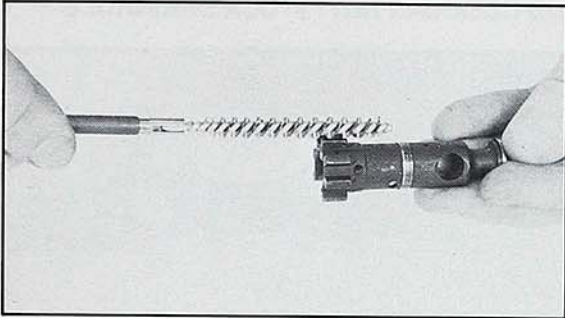


C. BOLT LOCKING LUGS.

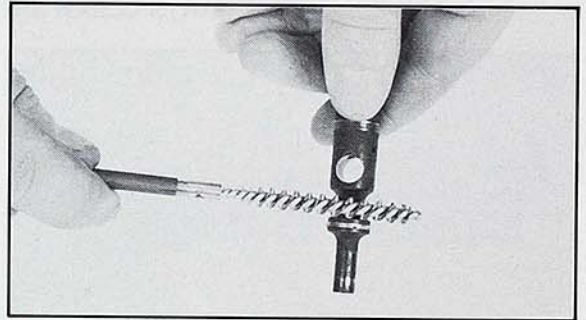

D. REAR OF BOLT.

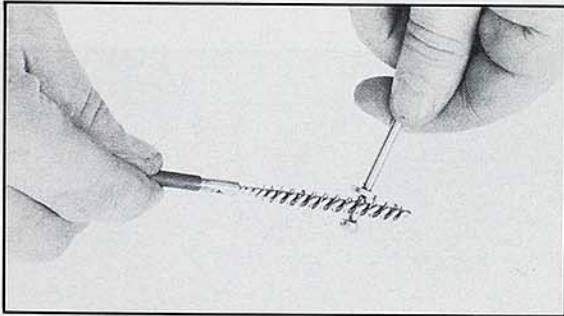


E. FIRING PIN

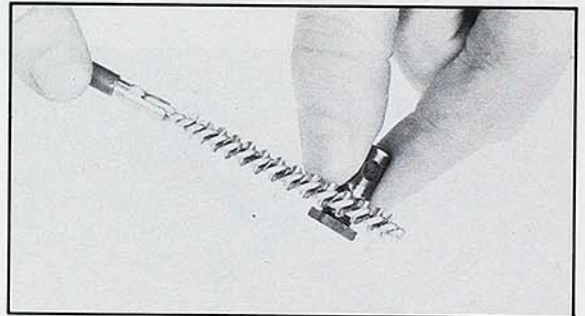

F. BOLT CAM PIN.




G. INSIDE BOLT CARRIER—FRONT.

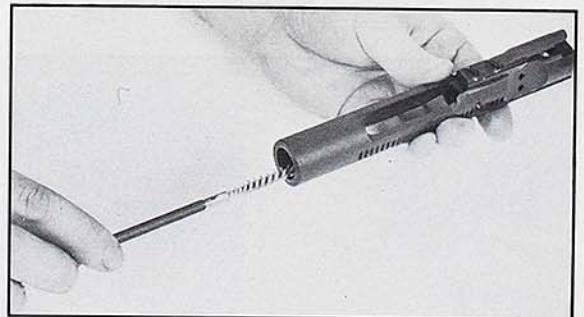


H. INSIDE BOLT CARRIER—REAR.

FIGURE 3-9. CLEANING CHAMBER AND KEY

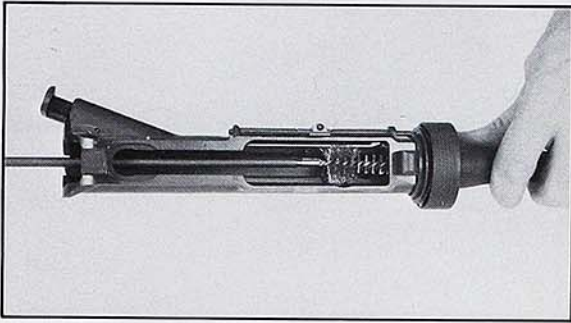


CHAMBER

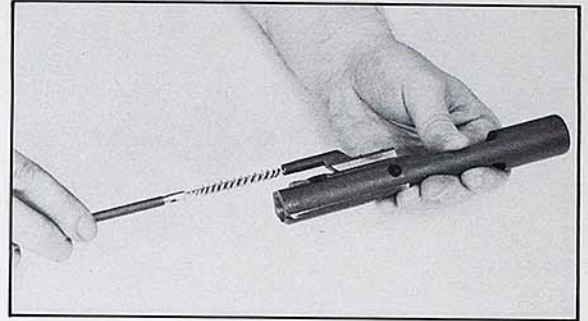


KEY


FIGURE 3-10. WIPING PARTS CLEAN AND DRY AND CLEANING BUTTSTOCK DRAINHOLE

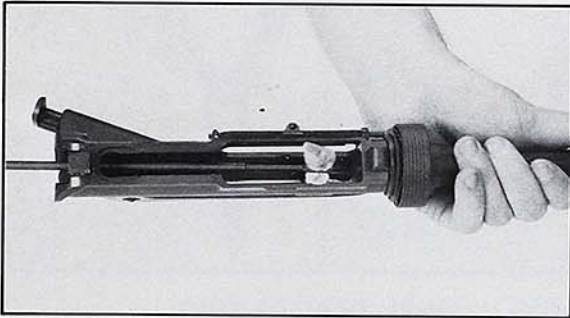


A. WIPING BARREL.

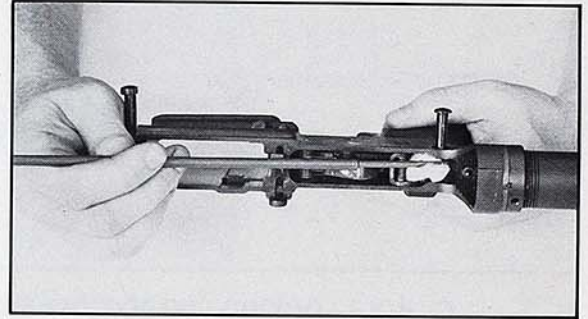


B. WIPING ACTION IN LOWER RECEIVER.

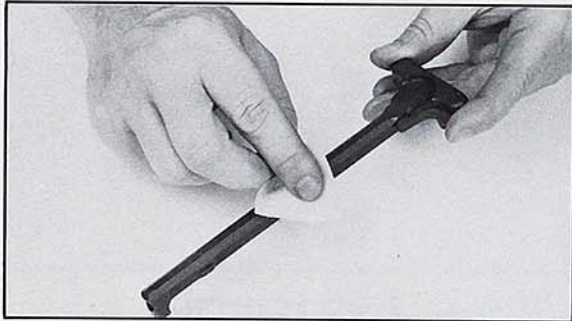


C. WIPING CHARGING HANDLE.

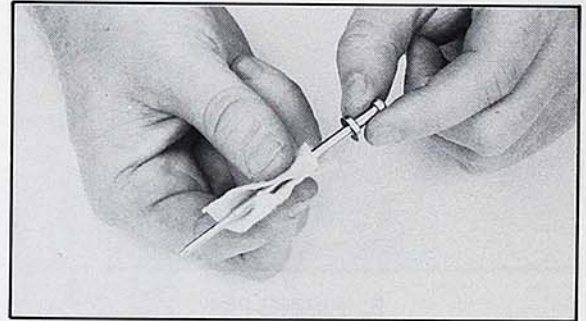

D. WIPING FIRING PIN.

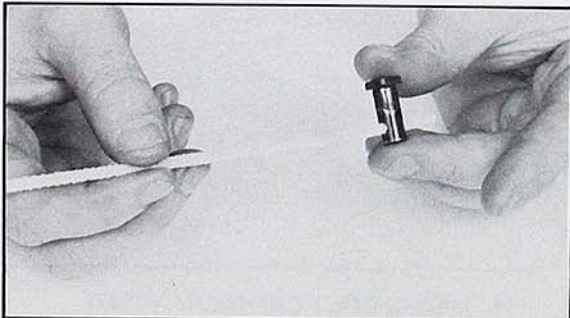


E. WIPING INSIDE CAM PIN.

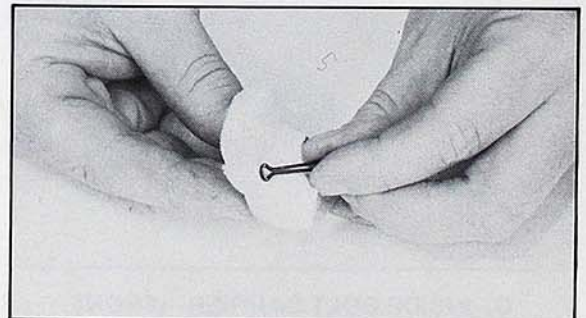


F. WIPING FIRING PIN RETAINING PIN.


FIGURE 3-10. WIPING PARTS CLEAN AND DRY (CONT.)

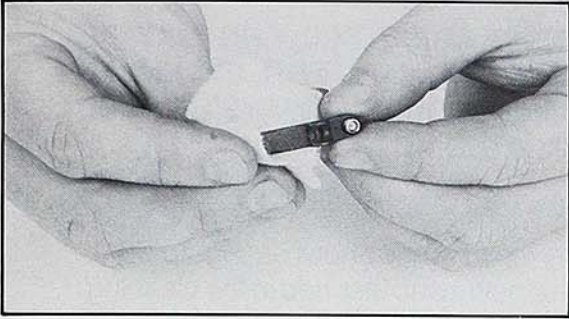


G. WIPING EXTRACTOR.

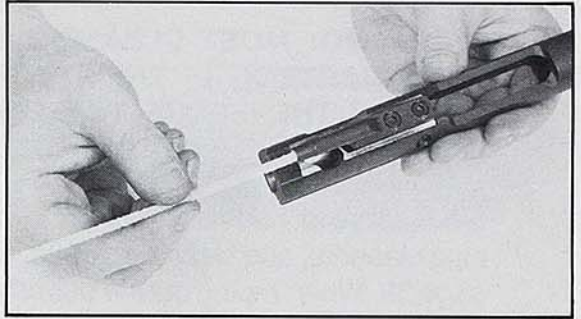


H. WIPING BOLT CARRIER KEY.

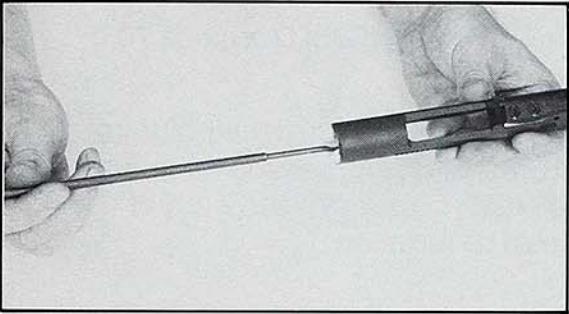


I. WIPING INSIDE BOLT CARRIER—REAR.

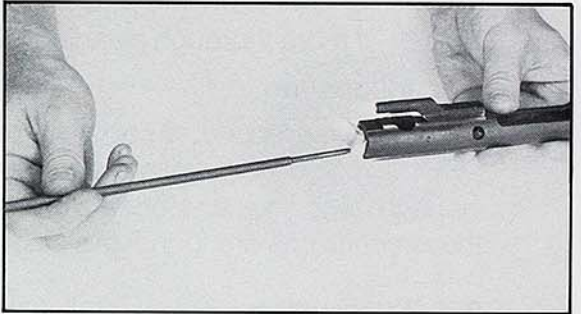


J. WIPING INSIDE BOLT CARRIER—FRONT.

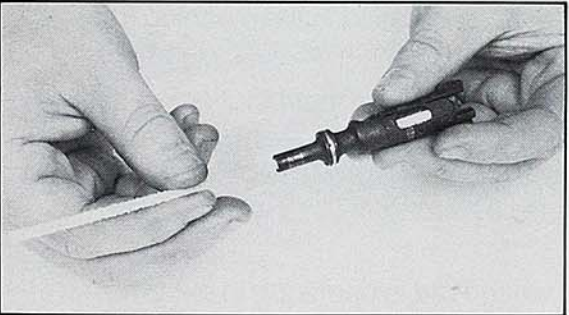

K. WIPING INSIDE BOLT.

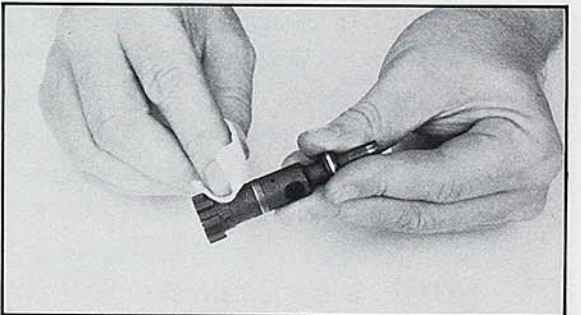

L. WIPING OUTSIDE BOLT.

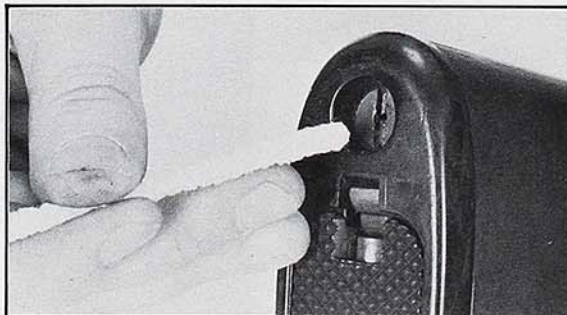

M. WIPE BUTTSTOCK AND CLEAN DRAIN HOLE.

3-5.5 Using a fiber or nylon brush and dry cleaning solvent, clean the remaining Rifle parts as well as the magazine parts (Figure 3-7, page 37).

WARNING: MOST CLEANING SOLUTIONS ARE TOXIC AND MAY BE VERY HARMFUL IF THEIR VAPORS ARE INHALED FOR EXTENDED PERIODS. THEREFORE, THESE SOLUTIONS SHOULD ALWAYS BE USED SPARINGLY AND ONLY IN A WELL VENTILATED AREA.

3-5.6 Wipe all parts of the Rifle clean and dry with clean, dry, cotton wiping rags, pipe cleaners, and cleaning swabs, especially those areas shown in Figure 3-10, page 39. When wiping out the barrel bore, use a new swab inserted in the cleaning rod swab holder for each pass through the barrel. Continue this process until a swab comes out of the barrel clean and dry.

3-5.7 Clean out drain hole in butt cap screw using a pipe cleaner. (See Figure 3-10, page 40).

NOTE: If more thorough cleaning is necessary see APPENDIX D on page 70.

3-6. Inspection

After cleaning, inspect all parts for excessive wear, corrosion, or mechanical damage. If any of these faults are discovered, the Rifle shall be turned in for repair. Also inspect magazine components for cracks, distortion, or excess wear. If any of these conditions are found, the magazine should be replaced.


3-7. Lubrication

After the Rifle parts have been cleaned and inspected, all metal parts shall be wiped with a cotton wiping cloth or cleaning swabs which have been lightly oiled with LSA or equivalent lubricant. A lightly oiled swab installed in the cleaning rod swab holder shall be run through the barrel bore once (See Figure 3-11, page 42).


IMPORTANT: The chamber shall be lubricated but it is important that only a thin film of lubricant be applied. Then apply one drop of LSA or equivalent lubricant to each of the places shown in Figure 3-12, pages 42 and 43. An exception to the above is the magazine. The only part which is to be wipe-oiled is the magazine spring.

NOTE: See special instructions on page 23 when Rifle is operating in extreme cold or extreme heat.

FIGURE 3-11. INTERNAL LUBRICATION OF BARREL BORE

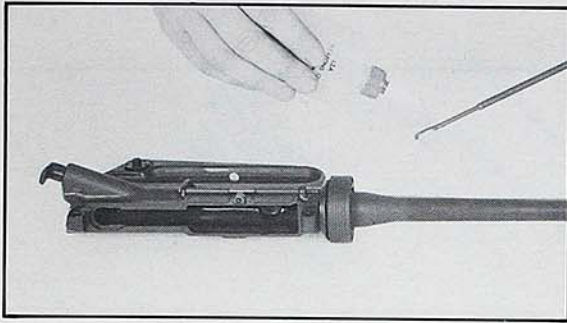


A. APPLYING LSA TO CLEANING SWAB.

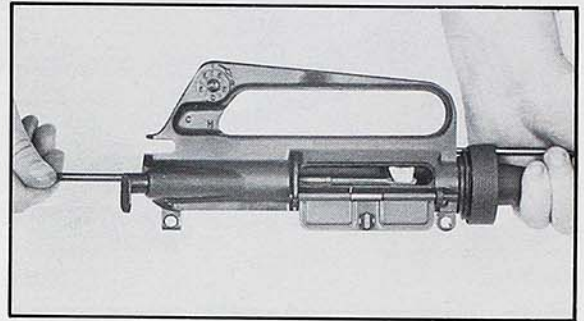


B. LUBRICATING BARREL BORE.


FIGURE 3-12. APPLICATION OF LSA LUBRICANT (OR EQUIVALENT)

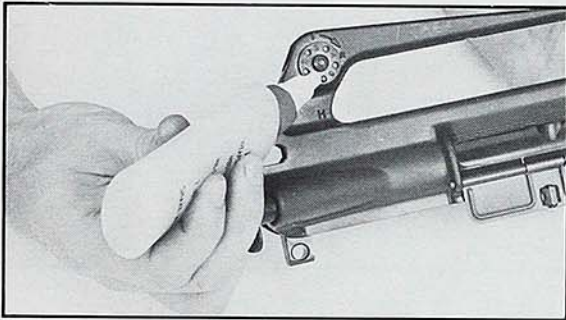


A. WINDAGE DRUM DETENT.

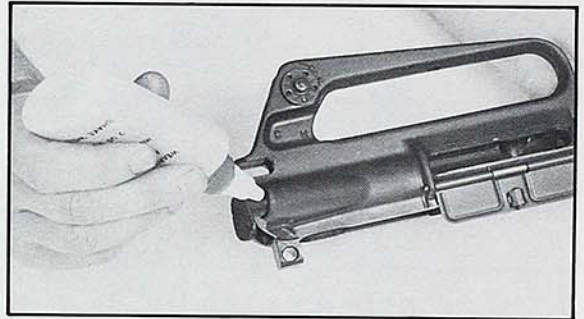


B. FORWARD ASSIST.

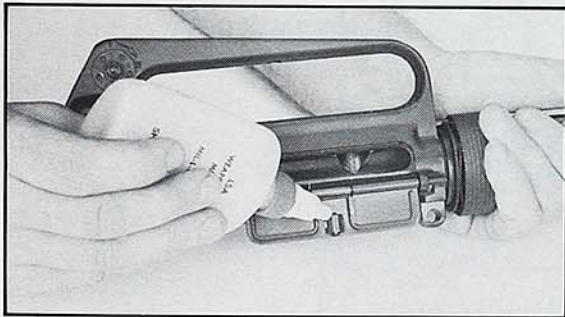


C. EJECTION PORT COVER LATCH.

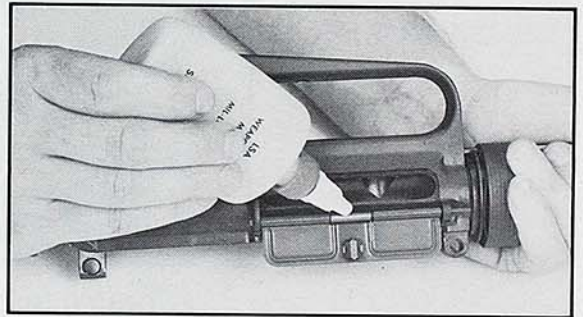

D. EJECTION PORT COVER SPRING.

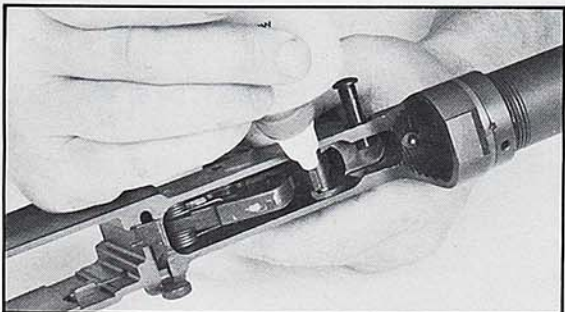


E. ACTION SPRINGS AND PINS.

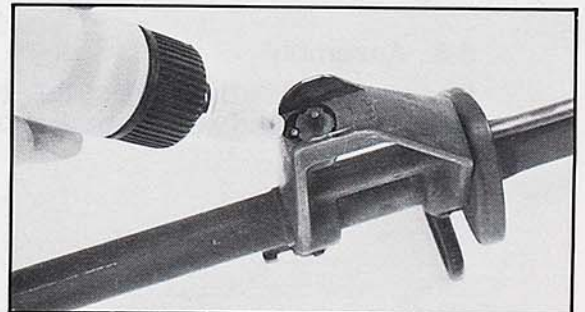


F. FRONT SIGHT DETENT.


FIGURE 3-12. APPLICATION OF LSA LUBRICANT (CONT.)

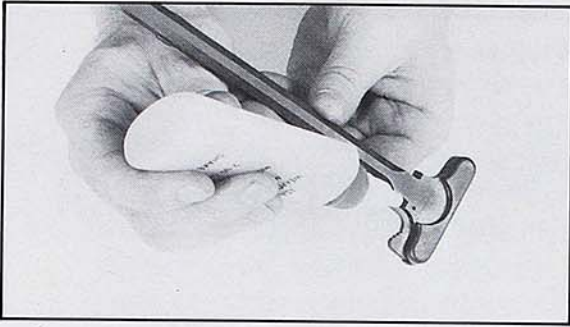

G. CHARGING HANDLE CATCH.

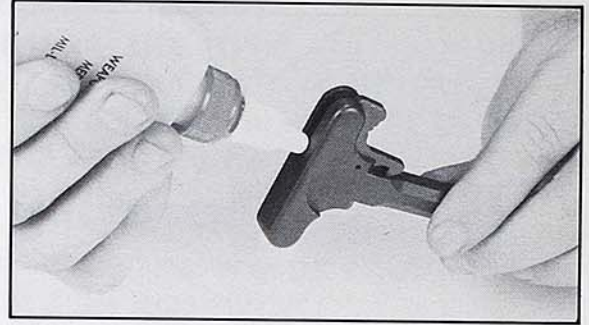


H. CHARGING HANDLE CATCH SPRING.

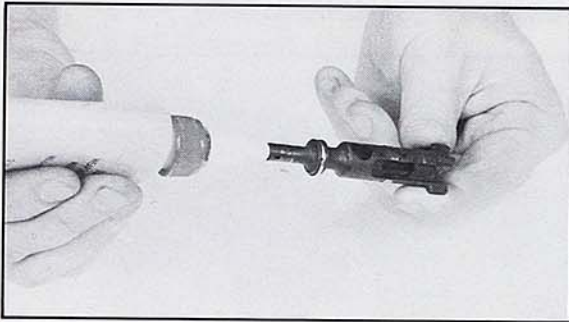

I. INSIDE BOLT AT REAR.



J. MOUTH OF BOLT KEY.

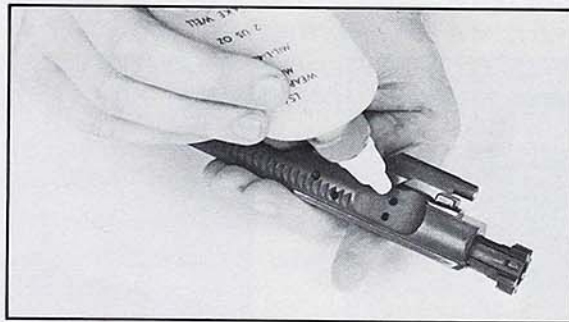

K. BOLT CARRIER EXHAUST PORTS.
(AFTER ASSEMBLY)

3-8. Assembly

Reassemble Rifle by reversing the procedure in Paragraph 3-4, page 31, by starting at page 41 and working back to page 31.

SECTION 3—UNIT MAINTENANCE INSTRUCTIONS

3-9. General


This section describes maintenance procedures to be performed by the unit armorer.

3-10. Disassembly.


The extent of disassembly required for the performance of maintenance by the unit armorer is as follows:

| Step | Action | Reference |
|------|---------------------------------|------------------------|
| A | Field strip Rifle and magazine. | Paragraph 3-4, page 31 |
| B | Remove ejector from bolt. | Figure 3-13 |


FIGURE 3-13. EJECTOR DISASSEMBLY

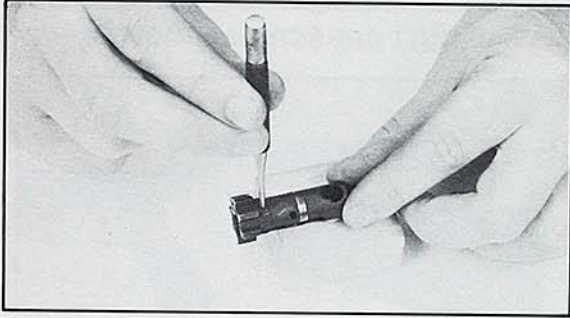

A. DRIVING OUT EJECTOR ROLL PIN.

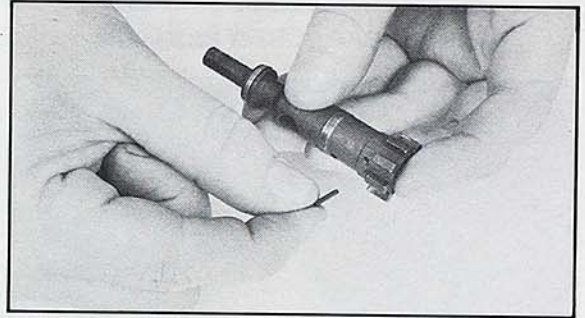

B. EJECTOR ROLL PIN REMOVED.

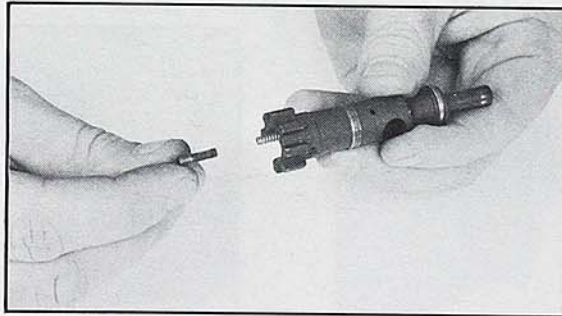


C. EJECTOR REMOVED.

NOTE: When disassembling ejector, keep finger over ejector to keep it from being lost due to ejector spring force when ejector roll pin is driven out.

C. Remove butt cap screw with a large screwdriver. Remove buttstock slowly so that detent spring does not fly out and get lost, then remove spring and detent. Remove takedown pin—Figure 3-14.


FIGURE 3-14. REMOVAL OF BUTTSTOCK AND DISASSEMBLY OF DETENTS AND TAKEDOWN PIN

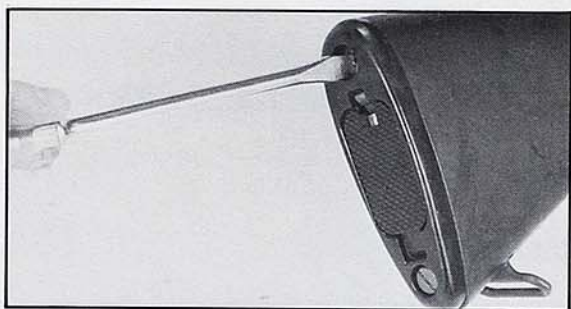

A. BUTT CAP SCREW REMOVAL.




B. BUTT CAP SCREW REMOVED.

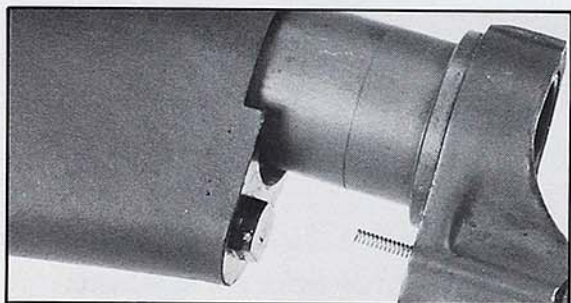


C. BUTTSTOCK REMOVAL.




D. BUTTSTOCK REMOVED.

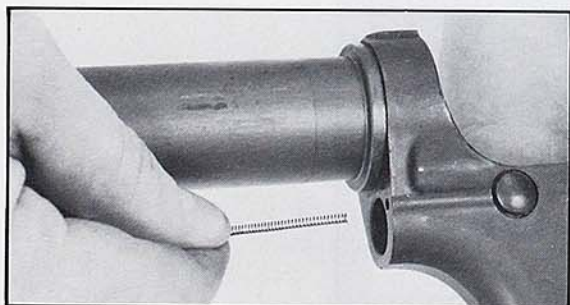

E. DETENT SPRING REMOVED.

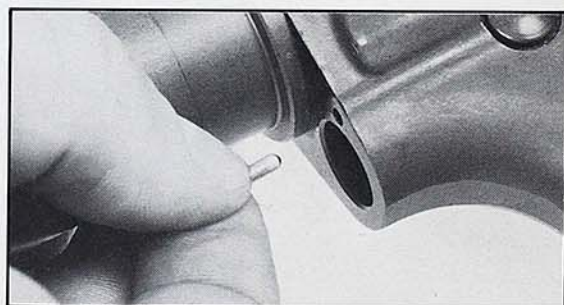

F. DETENT REMOVED.

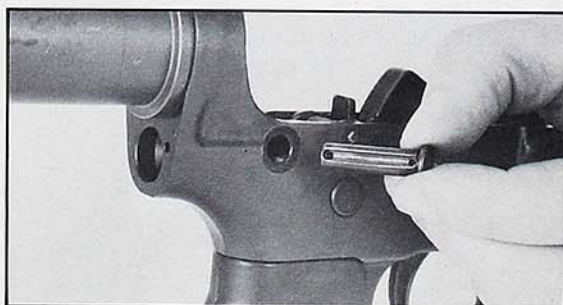

G. TAKEDOWN PIN REMOVED.

D. Test all detents for freedom of movement. If any are stuck or frozen, rectify as follows:

1. Attempt to depress the detent with a small punch or screwdriver.
2. If the detent cannot be depressed enough for disassembly, saturate it with penetrating oil, bore cleaner, or carbon removing compound and let stand for twenty-four hours. Then disassemble the components as illustrated in **Figures 3-14 through 3-17, page 45 through 49.**


CAUTION: CARBON REMOVING COMPOUND MAY DAMAGE YOUR EYES OR INJURE YOUR SKIN. AVOID CONTACT TO PREVENT INJURY. THE COMPOUND SHOULD BE WASHED OFF THOROUGHLY WITH RUNNING WATER IF IT COMES IN CONTACT WITH THE EYES OR SKIN.

Good lanolin base cream rubbed into the skin after exposure to compound is helpful. The use of gloves and protective equipment is recommended.

E. After disassembly, the springs, detents, and detent wells should be thoroughly cleaned, then generously oiled with LSA lubricant or equivalent before assembly to the Rifle.

F. If the Rifle cannot be disassembled by the methods described above, it shall be sent to a repair facility.


FIGURE 3-15. FIRE CONTROL SELECTOR DETENT DISASSEMBLY

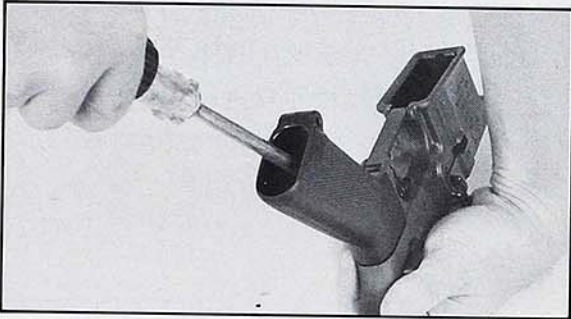


A. PISTOL GRIP SCREW REMOVAL.



B. PISTOL GRIP REMOVAL.

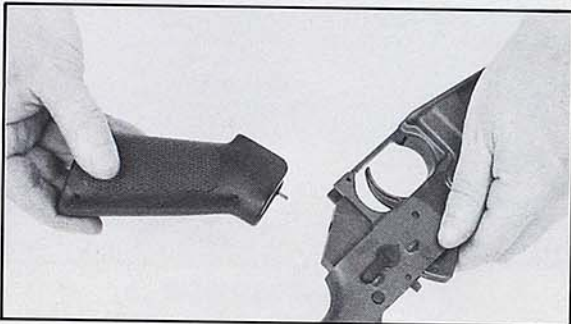


C. PISTOL GRIP REMOVED.

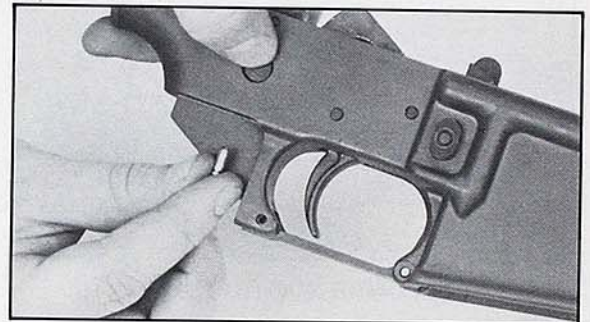


D. DETENT REMOVED.


FIGURE 3-16. FRONT SIGHT POST DISASSEMBLY

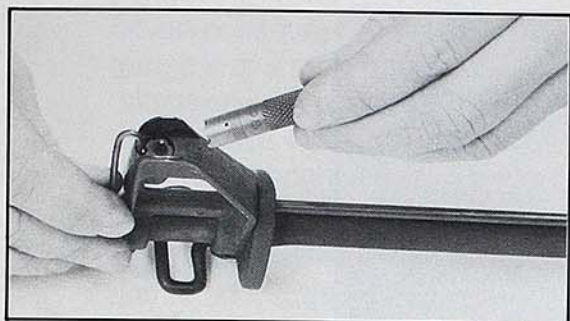

A. FRONT SIGHT POST REMOVAL.

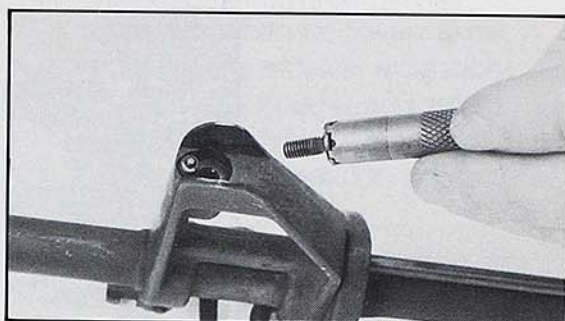


B. FRONT SIGHT POST REMOVED.

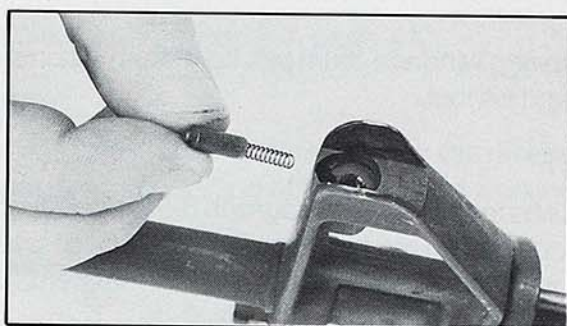


C. FRONT SIGHT DETENT REMOVED.

NOTE: The front sight post is removed by turning it counterclockwise while holding the detent depressed or by using the detent depressor, p/n 62672, and the sight post wrench, p/n CE1008, as illustrated above.

FIGURE 3-17. WINDAGE DRUM DETENT DISASSEMBLY

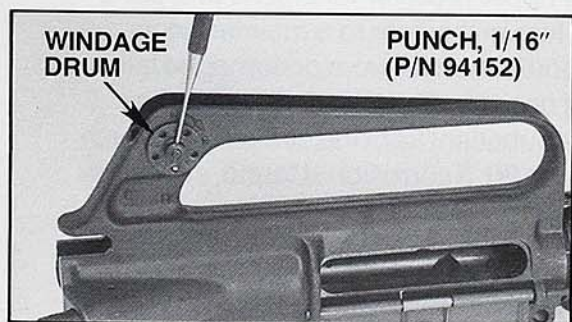


A. DRUM PIN REMOVAL.

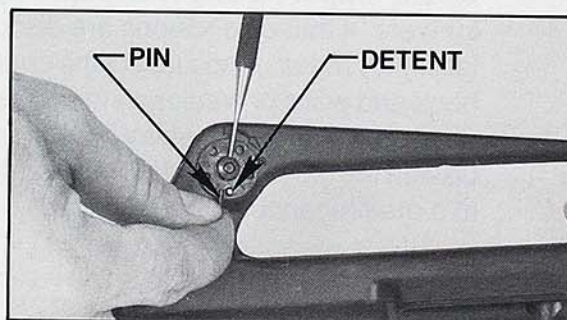

B. DRUM PIN REMOVED.

FIGURE 3-17. WINDAGE DRUM DETENT DISASSEMBLY (CONT.)

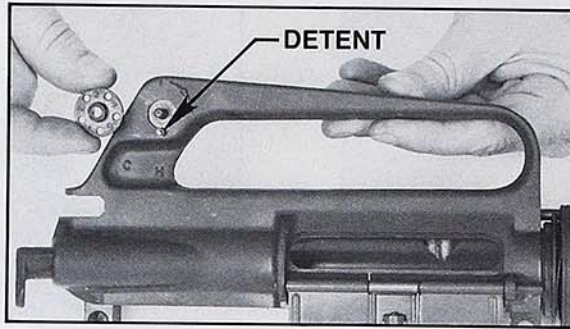

C. DRUM REMOVED.

NOTE: When removing windage drum pin, hold drum against receiver so that detent will not fly out and be lost.

3-11. Cleaning

Clean the Rifle parts as instructed in paragraph 3-5, page 31. Also remove all signs of rust on steel surfaces using crocus cloth. Do not use a coarser abrasive. If corrosion is discovered on aluminum surfaces, send to a maintenance facility for repair.

3-12. Inspection and Repair

Proceed as instructed in paragraph 3-6, page 41. Also comply with the instructions which follow:

3-12.1 Bolt Assembly. Inspect for cracks in the bolt (especially in the area of the cam pin hole), condition of the locking lugs, pitted or chipped bolt face, elongated firing pin hole, or broken bolt rings. If any of these conditions are discovered, turn in the item to a maintenance facility for repair. Also, inspect the ejector, ejector spring, and ejector pin for excessive wear or rust and replace if necessary.

3-12.2 Upper Receiver Group. Inspect the upper receiver for cracks and parts for wear. If these conditions are discovered, turn in the item to a maintenance facility for repair. Also inspect the charging handle latch for worn or damaged latch hook and worn or weak spring and replace if necessary. If the receiver finish is scratched or worn off (shiny bright), remove all lubricant from the surface and touch up with the lacquer listed in paragraph 3-2, page 30. If corrosion is found, send item to a maintenance facility for repair.

3-12.3 Lower Receiver Group. Inspect pistol grip for cracks and for damaged screw or lockwasher. Replace damaged parts. Inspect the stock assembly for cracks or damage and replace if necessary. Damaged or cracked stocks are to be turned in to a maintenance facility for repair. Inspect the lower receiver extension takedown pin, pivot pin, and fire control selector as well as their detents and detent pin. Replace worn or damaged parts. Inspect the receiver finish for scratches or wear (shiny bright areas). If discovered, refinish as in 3-12.2. If corrosion is found on the receiver, turn it in to a maintenance facility for repair.

3-12.4 Magazine. Inspect the magazine box for bulges, dents, excessive wear, or damaged lips; the spring for kinks, cracks, breaks or rust; and the follower for excessive wear. If any of the above conditions are found replace the magazine.

3-13. Lubrication

Proceed as instructed in paragraph 3-7, page 41.

3-14. Reassembly

Reassemble the Rifle and magazine by reversing the disassembly procedure in paragraph 3-10, page 44, by starting at page 49 and working back to page 44.

SECTION 4—PREVENTIVE MAINTENANCE SERVICES

3-15. General

Preventive maintenance is the systematic care, inspection, and servicing of equipment to keep it in serviceable condition, prevent breakdowns, and assure operational readiness. The operator's role in performance of this service is to perform daily service and to assist the unit armorer in the performance of scheduled periodic services.

3-16. Specific Procedures

Listed below are the specific procedures to be performed by the operator (O) and unit armorer (A).

| Step Interval | Action | Reference |
|------------------------|--|--|
| A Before operation (O) | Wipe excessive oil from bore and chamber | Figure 3-10a, page 39 |
| B Before operation (O) | Hand function rifle to assure proper condition | Paragraph 2-17, page 25 |
| C After operation (O) | Clean and lubricate | Paragraphs 3-5, page 31 and 3-7, page 41 |
| D Monthly (A) | Clean and lubricate detents and springs | |

SECTION 5—Troubleshooting**3-17. General**

The troubleshooting instructions which follow are to aid the operator and unit armorer to restore worn, damaged, or inoperative rifles to a serviceable condition.

| Malfunction | Probable Cause | Corrective Action |
|---|---|--|
| Failure to fire. | Selector lever on SAFE. | Move selector to SEMI or AUTO. |
| | Damaged firing pin. | Replace. |
| | Improper assembly of firing pin in bolt carrier group. | Remove firing pin and install correctly. Inspect retaining pin for damage. |
| | Too much oil in bolt firing pin recess. | Disassemble bolt and clean out excess oil. |
| | Fire control mechanism improperly assembled or with worn, broken, or missing parts. | Maintenance base repair. |
| Failure to unlock (bolt siezes—will not rotate from locked position). | Trigger pin improperly installed. | Check that tails of hammer spring engage grooves in trigger pin. |
| | Bolt group, firing pin, or barrel extension burred, dirty, or carboned. | Remove magazine. Hold rifle pointing up (stay clear of muzzle) and strike butt sharply and squarely on ground while pulling back on charging handle.* Remove bolt group, clean and lubricate. |

*** CAUTION: MAKE CERTAIN TO BE CLEAR OF MUZZLE. STRIKE BUTT SQUARELY ON GROUND TO PREVENT DAMAGE TO BUTTSTOCK.**

3-17. Troubleshooting—General (Cont.)

| Malfunction | Probable Cause | Corrective Action |
|---------------------------|--|--|
| Failure to extract. | Dirty or corroded ammunition. | Remove ammunition and clean the magazine. |
| | Carbon and dirt build-up in chamber. | Clean chamber. |
| | Carbon and dirt build-up in extractor recess or extractor lip. | Disassemble and clean. |
| | Defective extractor, extractor spring, or pin. | Replace. |
| | Rim shear due to badly pitted chamber. | Maintenance facility replacement. |
| Failure to eject. | Separated cartridge case caused by excessive headspace, etc. | Remove bolt and run bore brush through from muzzle end of barrel. If this does not remove separated case, turn in for repair. In any event, headspace should be checked by an armorer. |
| | Broken ejector. | Replace. |
| | Jammed ejector. | Disassemble and clean. |
| | Worn or broken ejector spring. | Replace. |
| Failure to remain cocked. | Short recoil. | See "Short Recoil" in malfunction column. |
| | Worn, broken, or missing parts in fire control mechanism. | Maintenance facility repair. |
| | Hammer pin incorrectly installed. | Remove and install correctly. |

3-17. Troubleshooting—General (Cont.)

| Malfunction | Probable Cause | Corrective Action |
|---|---|--|
| Failure to feed. | Magazine not seated properly. | Adjust magazine catch. Push in magazine catch button and rotate catch clockwise to tighten. |
| | Dirty or corroded ammunition. | Remove ammunition and clean the magazine. |
| | Dirty magazine. | Disassemble and clean. |
| | Defective magazine. | Replace magazine. |
| | Too many rounds in magazine. | Reload magazine with 20 or 30 rounds as appropriate. |
| CAUTION: DO NOT LOAD THE MAGAZINE BEYOND ITS RATED CAPACITY. | | |
| | Restricted buffer assembly action. | Remove, clean and lubricate buffer assembly and action spring. |
| | Short recoil. | See "Short Recoil" in malfunction column. |
| Double feed. Failure to chamber. | Defective magazine. | Replace magazine. |
| | Dirty or corroded ammunition. Restricted movement of bolt carrier group. | Remove ammunition from magazine and clean. Disassemble, thoroughly clean, and lubricate Rifle. Remove charging handle from upper receiver; point receiver upward, and install bolt carrier group in receiver. Slowly slide carrier in receiver to check alignment and free movement of carrier key and gas tube. If binding occurs, turn rifle in to a maintenance facility for repair. |

3-17. Troubleshooting—General (Cont.)

| Malfunction | Probable Cause | Corrective Action |
|--------------------------------|--|---|
| Failure to chamber. (cont.) | Bolt cam pin missing. | Replace. |
| | Loose or damaged bolt carrier key. | Turn in to a maintenance facility for repair. |
| | Improperly assembled extractor spring. | Disassemble and assemble correctly, making sure that rubber insert is installed. |
| | Bent gas tube. | Turn in to a maintenance facility for repair. |
| | Misaligned carrier key and gas tube. | Turn in to a maintenance facility for repair. |
| Failure to lock. | Damaged ammunition. | Replace. |
| | Carbon buildup in chamber. | Clean chamber. |
| | Dirt, corrosion, or carbon buildup on bolt or barrel extension locking lugs. | Clean. |
| | Jammed extractor. | Clean and lubricate. |
| | Dirt on bolt face. | Clean. |
| | Jammed ejector. | Disassemble and clean. |
| | Restricted buffer assembly movement. | Remove buffer and action spring, clean and lubricate. Also clean inside receiver extension. |
| Short recoil. | Worn or broken action spring. | Replace. |
| | Gaps in bolt ring not staggered. | Stagger bolt ring gaps. |

3-17. Troubleshooting—General (Cont.)

| Malfunction | Probable Cause | Corrective Action |
|---|---|--|
| Short recoil (cont.) | Carbon buildup or dirt in carrier key and on outside of gas tube. | Clean and lubricate bolt carrier group and outside of gas tube. |
| | Restricted movement of bolt carrier group of buffer assembly. | See "Failure to Lock" in malfunction column. |
| | Missing or broken bolt rings or loose carrier key. | Maintenance facility repair. |
| | Gas leakage due to broken or loose gas tube. | Maintenance facility repair. |
| | Restricted gas flow through gas tube due to propellant deposits. | Maintenance facility replacement. |
| Bolt fails to lock to rear after last shot fired. | Dirty or corroded bolt catch. | Clean and lubricate. If disassembly is necessary turn in to a maintenance facility for repair. |
| | Faulty magazine. | Replace. |
| | Broken bolt catch or spring. | Maintenance facility repair. |
| Failure to cycle with selector set at AUTO. | Worn, broken or missing parts in fire control mechanism. | Maintenance facility repair. |
| Fires with selector at SAFE. | Worn, broken or missing parts in fire control mechanism. | Maintenance facility repair. |
| With selector on SEMI, fires when trigger released. | Worn, broken, or missing parts in fire control mechanism. | Maintenance facility repair. |

3-17. Troubleshooting—General (Cont.)

| Malfunction | Probable Cause | Corrective Action |
|-----------------------|--|--------------------------|
| Selector lever binds. | Dirt corrosion or lack of lubrication. | Clean and lubricate. |


CHAPTER IV—ACCESSORY EQUIPMENT

SECTION 1—BAYONET AND SCABBARD

4-1. General

This section contains operation and maintenance information on the bayonet and scabbard used with the M16, M16A1 rifle and Carbine.

FIGURE 4-1. BAYONET—KNIFE AND SCABBARD

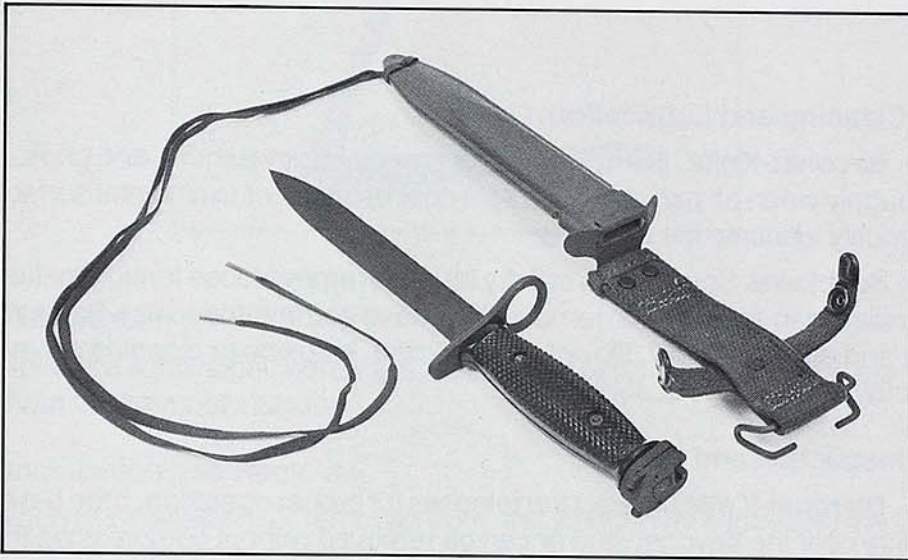

4-2. Description and Usage

4-2.1 Bayonet-Knife, US Model M7 (See Figure 4-1).

The bayonet-knife is used for close combat, guarding prisoners, riot duty, etc., when installed on the weapon as a bayonet. It is also used as a general purpose knife. The blade is pointed with a full length cutting edge on the bottom as installed on the weapon, and a three inch cutting edge on the top. The handle is shaped and has a knurled surface for a firm, comfortable grip.



4-2.2 Bayonet-Knife Scabbard, US Model M8A1 (See Figure 4-1).

The bayonet-knife scabbard is used to carry the bayonet-knife.

4-3. Installation and Removal

The bayonet-knife is installed on the weapon as shown in Figure 4-2, page 59.

FIGURE 4-2. BAYONET INSTALLATION

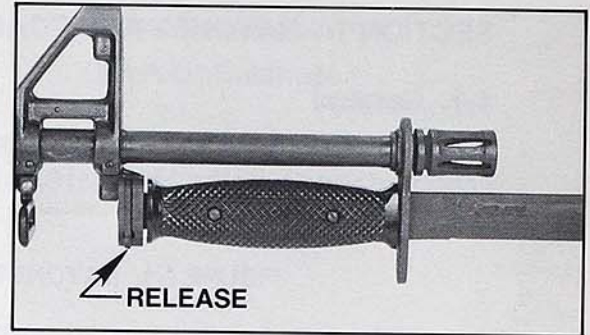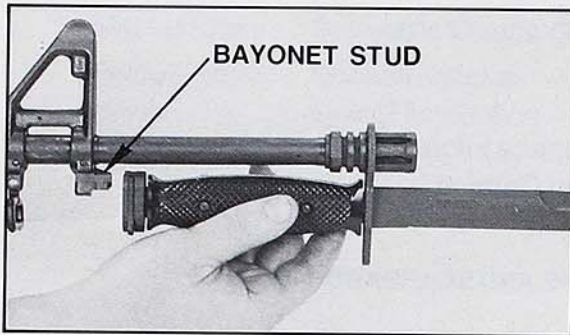

4-4. Cleaning and Lubrication

4-4.1 Bayonet-Knife. Remove the grip screws, lock washers, and grips. Thoroughly clean all parts. Apply a light coat of lubricant to all metal surfaces and generously lubricate the releases.

4-4.2 Scabbard. Scrub with a stiff dry brush to remove loose foreign matter. Then scrub with soap and water to remove oil, grease and imbedded dirt. Rinse well with water and dry thoroughly. Do *not* use gasoline, kerosine or cleaning solvents as they may damage the scabbard.

4-5. Inspection and Repair

4-5.1 Bayonet-Knife. Inspect the releases for proper operation. If the bayonet will not slide over the bayonet stud or can be removed without compressing the releases, the releases are incorrectly installed or the release springs are weak or broken; and so, the bayonet should be turned in to a maintenance facility for repair. If any grip screws or lock washers are missing, replace them.


4-5.2 Scabbard. Inspect the Scabbard for evidence of rotting or weakening due to mildew by stretching and pulling the fabric. If fabric shows signs of weakening, replace it.

SECTION 2—BIPOD, RIFLE

4-6. General

This section contains operation and maintenance instructions for the Bipod, Rifle, US Model M3 used with the Rifle and Carbine.

FIGURE 4-3. BIPOD

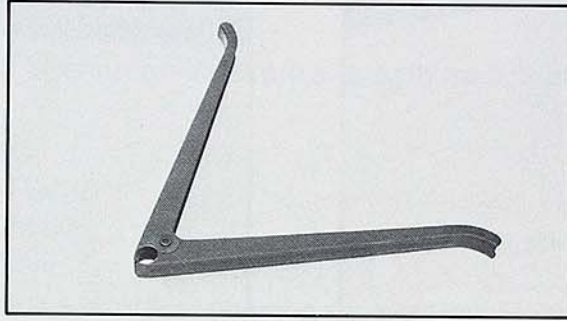

4-7. Description

The bipod is a lightweight, non-adjustable mount which clamps on the barrel with or without the bayonet installed.

4-8. Installation and Removal

The bipod is installed on, or removed from, the weapon by squeezing the bipod legs together, as shown in Figure 4-4, page 61.


4-9. Cleaning and Lubrication

Clean off all dirt and grease with bore cleaning compound. Apply a generous amount of lubricant to all surfaces making certain the spring is well lubricated.


4-10. Inspection

Inspect the bipod for cracks, distortion, or a weak spring. If any of these conditions exist, replace the bipod.

FIGURE 4-4. BIPOD INSTALLATION

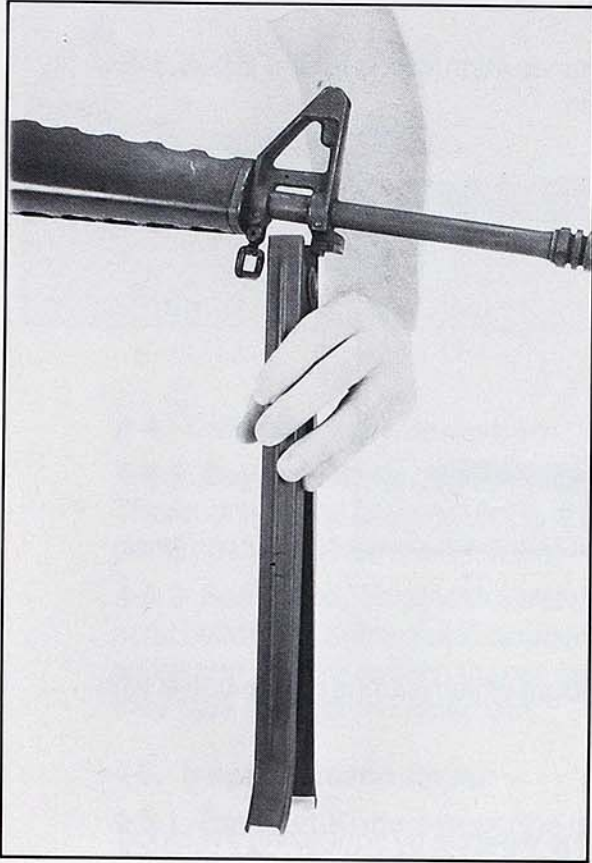

A. INSTALLING BIPOD.

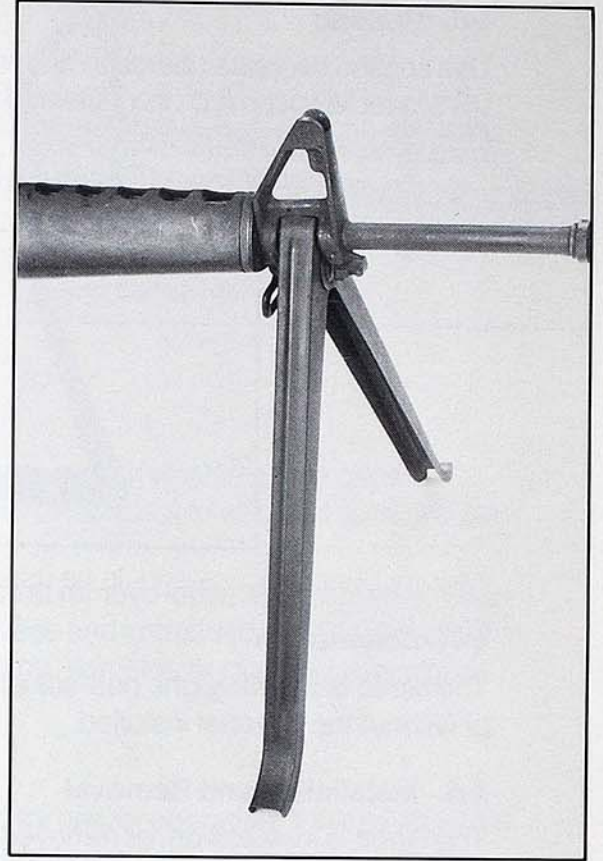

B. BIPOD INSTALLED.

CHAPTER V — AMMUNITION

5-1. General

The ammunition for the M16A1 weapon is classified as small-arms ammunition and is in the form of a complete round. A complete round (cartridge) consists of all the components necessary to fire the weapon once; that is, projectile (bullet), cartridge case, propellant, and primer.

5-2. Authorized Ammunition

The following U.S. Military cartridges are among those authorized for use with this weapon:

- A. Ball, M193
- B. Tracer, M196
- C. Dummy, M199
- D. Blank, M200

IMPORTANT: To insure proper operation only ammunition manufactured to U.S. Military Specifications should be used in the M16A1 weapon.

APPENDIX A**PARTS LIST
(OPERATOR INSTALLED)**

Parts For: M16A1 Rifle

PART NUMBER**MAJOR GROUPS AND ASSEMBLIES****62103**

Magazine Assembly: 20 cartridge capacity

62328

Magazine Assembly: 30 cartridge capacity

UPPER RECEIVER GROUP**62196**

Handguard Assembly LH

62198

Handguard Assembly RH

62290

Charging Handle Assembly

BOLT CARRIER GROUP**62335**

Pin, Firing Pin Retaining

62294

Pin, Firing

61704

Pin, Bolt Cam

61563

Pin, Extractor

61562

Extractor, Cartridge

62770

Spring, Extractor Assembly

LOWER RECEIVER GROUP**92701**

Screw, Pistol Grip

90001Washer, Lock: Flat, ext-Teeth, ¼ Nom size,
0.257 Mas. ID, 0.510 Max. OD,
0.028 Max. Thk.**62194**

Grip, Pistol (Black)

61569

Spring, Ejector and Selector Lever Detent

61785

Detent, Selector Lever

APPENDIX B**PARTS LIST****(UNIT MAINTENANCE INSTALLED)**

(Refer to Figures B-1, B-2, B-3 and B-4)

| Part Number | Nomenclature | Fig. No. |
|--------------------|---|-----------------|
| 61562 | Extractor | B2 |
| 61563 | Pin, Extractor | B2 |
| 61564 | Ejector | B2 |
| 61569** | Spring, Ejector | B2 |
| 61581 | Spring, Action | B4 |
| | Spring, Selector Lever Detent | B4 |
| 61655 | Pin, Takedown | B4 |
| 61692** | Spring, Detent, Takedown Pin, and Pivot Pin | B4 |
| 61698** | Detent, Takedown Pin and Pivot Pin | B4 |
| 61700 | Sight, Rear | B3 |
| 61702 | Screw, Rear Sight Windage | B3 |
| 61703 | Drum, Windage | B3 |
| 61704 | Pin, Cam | B2 |
| 61705 | Detent, Front Sight | B3 |
| 61706 | Post, Front Sight | B3 |
| 61708 | Spring, Rear Sight | B3 |
| 61709 | Spring, Front Sight Detent | B3 |
| 61754 | Spring, Detent, Rear Sight | B3 |
| 61755 | Detent, Rear Sight | B3 |
| 61785 | Detent, Selector Lever | B4 |
| 62116 | Bolt Assembly | B2 |
| 62194 | Grip, Pistol | B4 |
| 62196 | Handguard Assembly LH | B3 |
| 62198 | Handguard Assembly RH | B3 |
| 62290 | Charging Handle Assembly | B3 |
| 62294 | Pin, Firing | B2 |
| 62335 | Pin, Retaining, Firing Pin | B2 |
| 62339 | Buffer Assembly | B4 |
| 62727 | Buttstock Assembly, Stowage | B4 |
| 62728 | Buttplate Assembly | B4 |
| 62730 | Door Assembly | B4 |
| 62734 | Hinge Pin | B4 |
| 62735 | Screw | B4 |
| 62736 | Hinge | B4 |
| 62737 | Swivel | B4 |
| 62738 | Buttstock | B4 |
| 62770 | Spring Extractor Assembly | B2 |
| 90001 | Washer, Lock (MS-35335-61) | B4 |
| 92601 | Screw Buttcap | B4 |
| 92701 | Screw, Pistol Grip (MS-35276-284) | B4 |
| 95101 | Pin, Roll, Rear Sight Drum (MS-16561-96) | B3 |
| 95102 | Pin, Roll, Ejector (MS-16562-99) | B2 |

** = Multiple Use Item

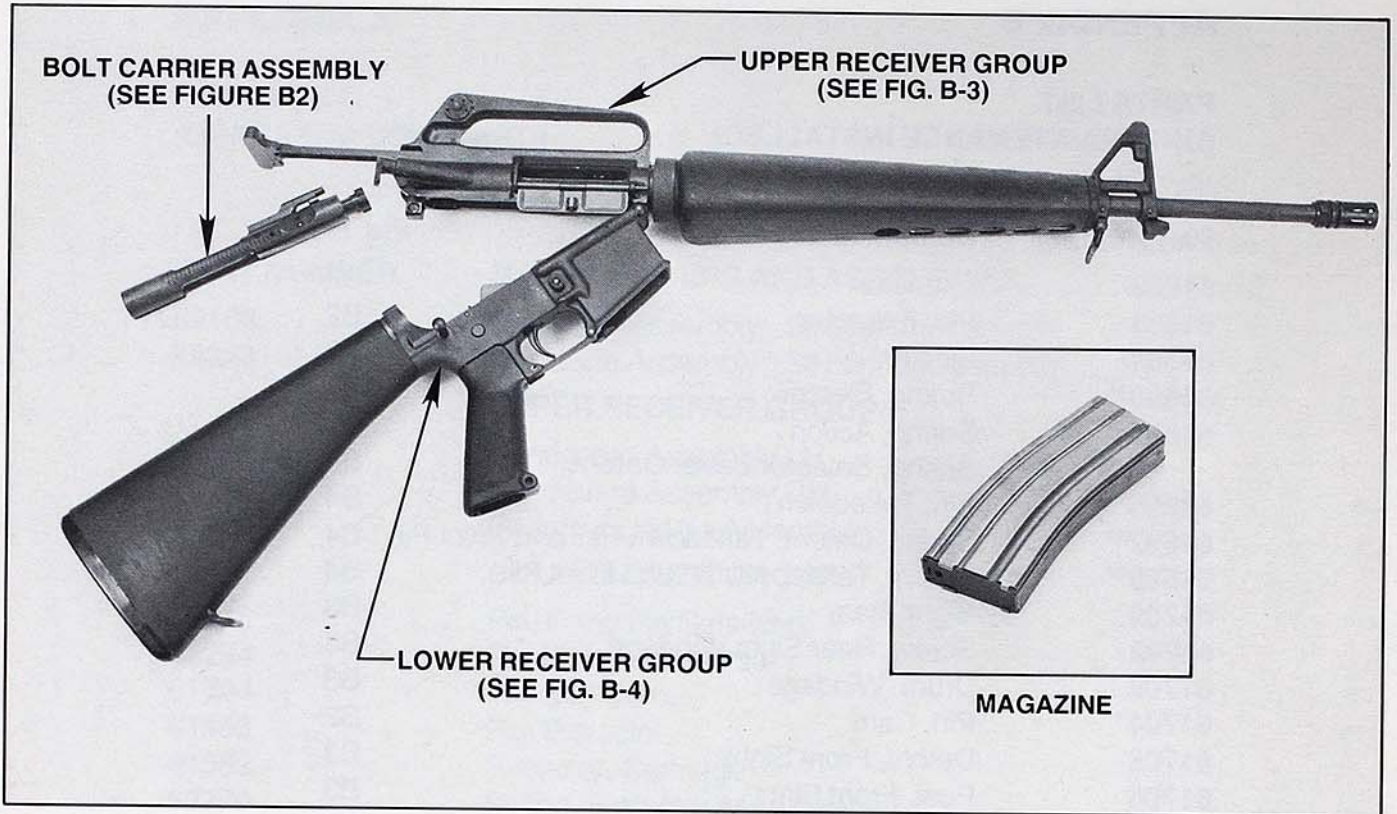


FIGURE B-1. KEY TO PARTS LIST ILLUSTRATIONS

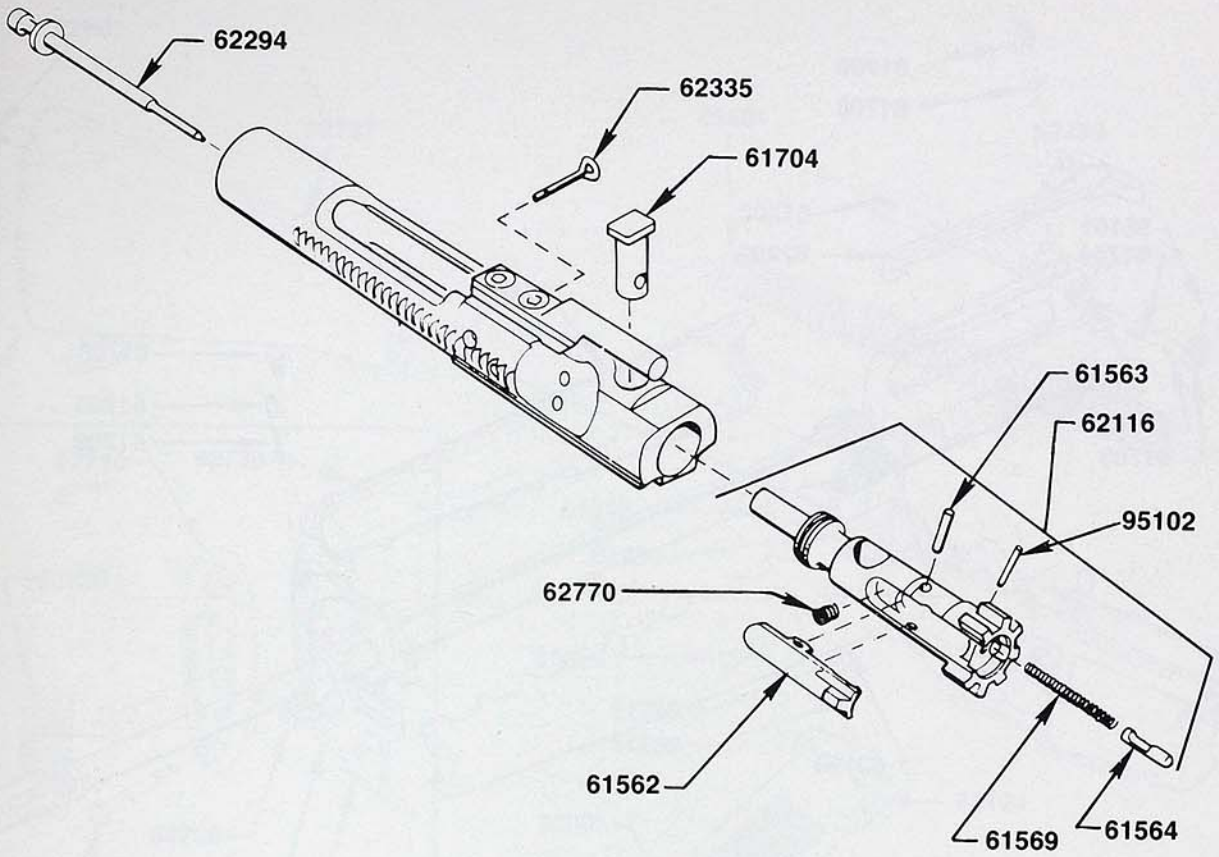


FIGURE B-2. BOLT CARRIER ASSEMBLY PARTS

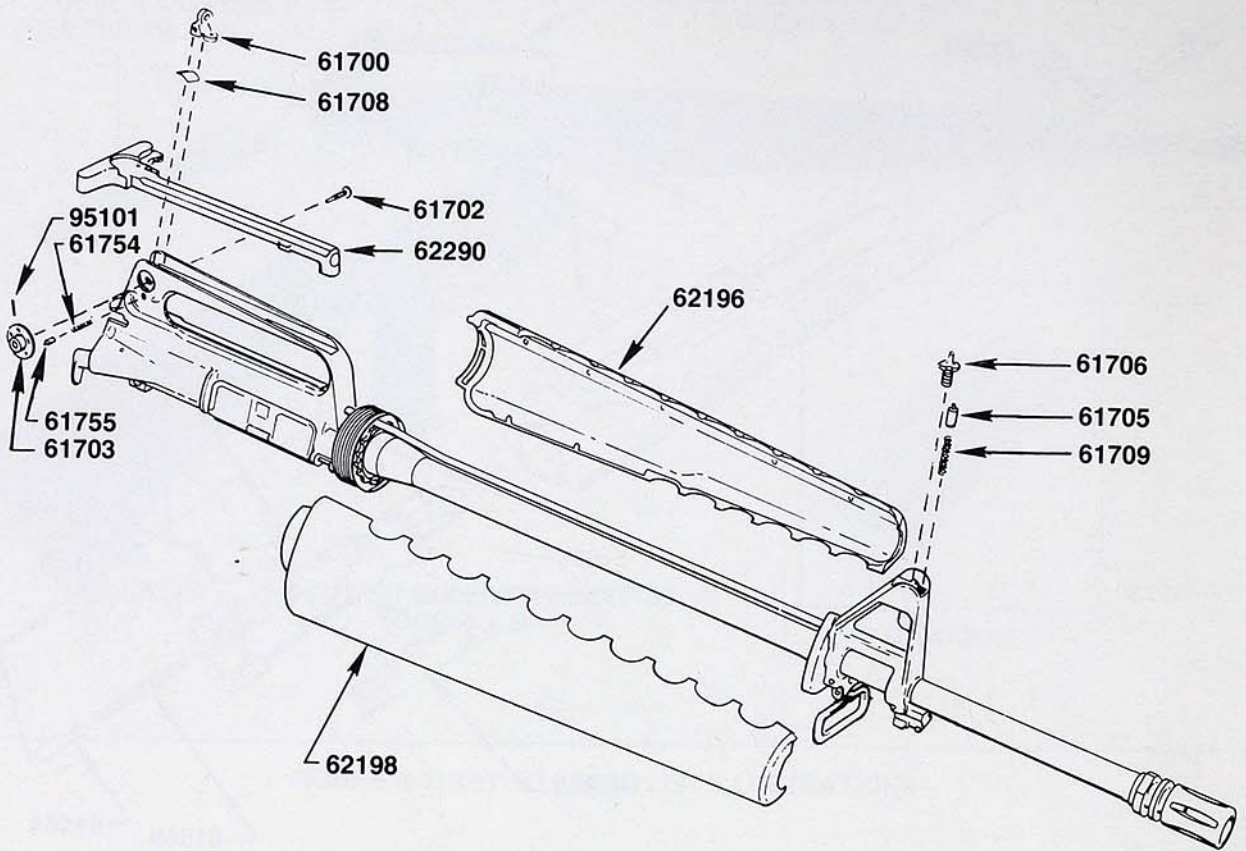


FIGURE B-3. UPPER RECEIVER PARTS

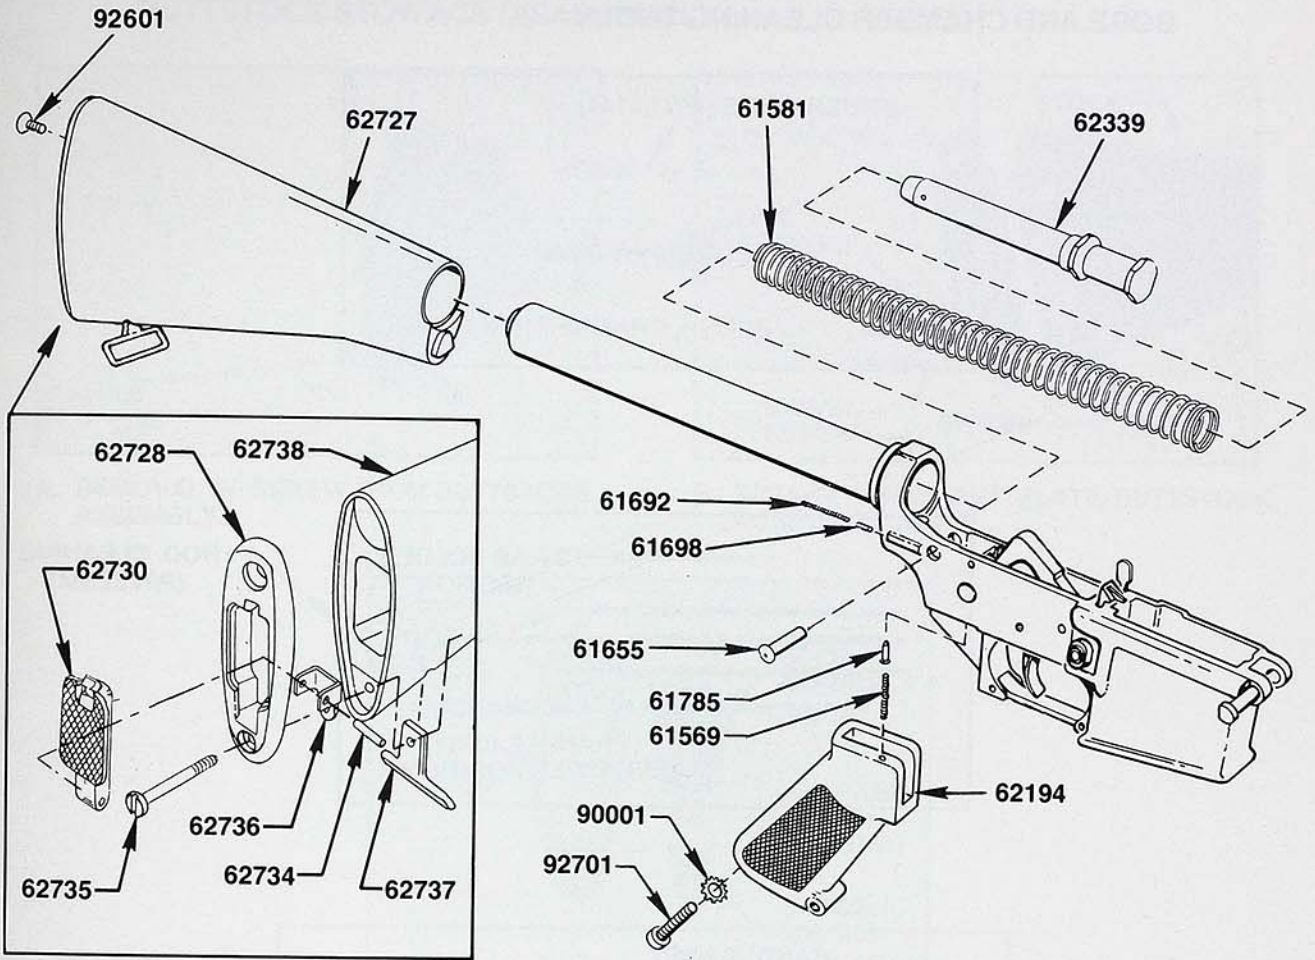


FIGURE B-4. LOWER RECEIVER PARTS

APPENDIX C

BORE AND CHAMBER CLEANING TOOLS




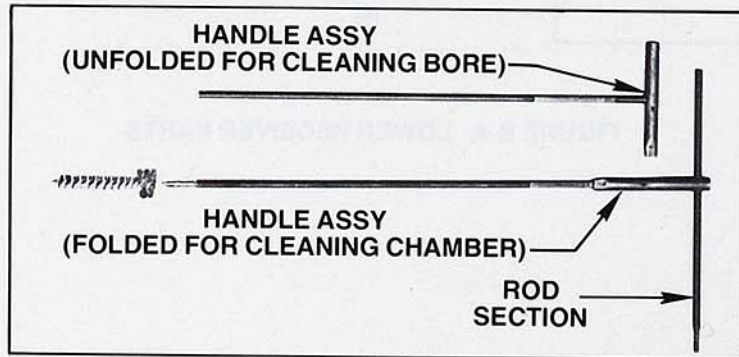



FIGURE C-1. BORE AND CHAMBER CLEANING TOOLS

APPENDIX D


BUTTSTOCK STOWAGE DISASSEMBLY

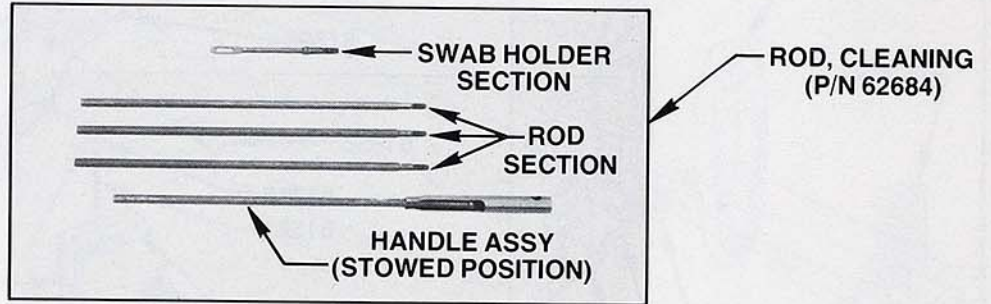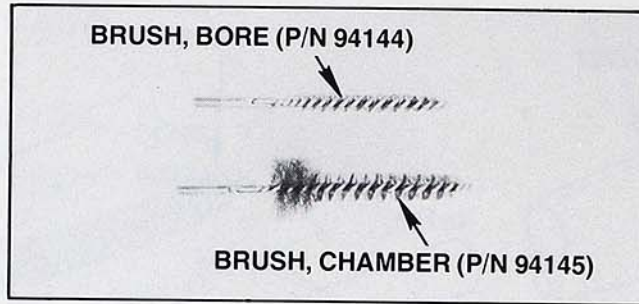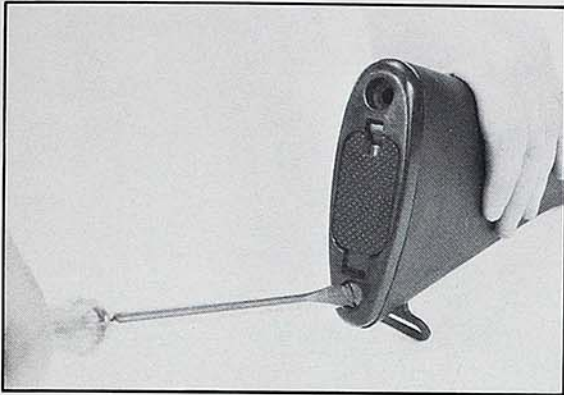

A. REMOVAL OF SCREW FROM BUTTSTOCK ASSEMBLY.

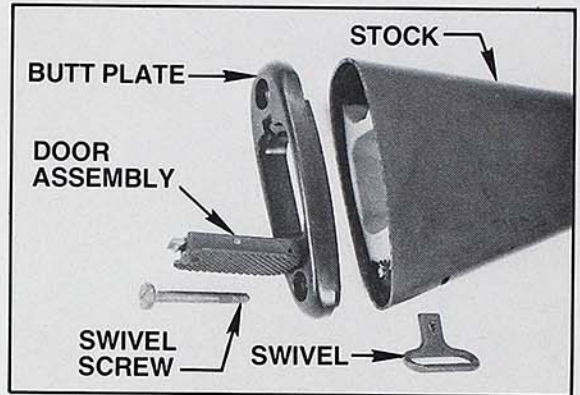

B. SEPARATION OF BUTTPLATE, BUTTSTOCK, SCREW AND SWIVEL.

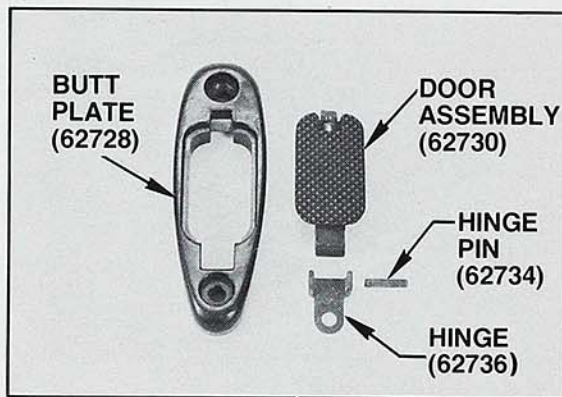

C. SEPARATION OF DOOR ASSEMBLY, BUTT-CAP, HINGE AND HINGE PIN.

FIGURE D1 BUTTSTOCK STOWAGE DISASSEMBLY

Disassembly of the Buttstock Assembly is accomplished as follows:

1. Remove stock screw (92601). This will permit the Buttstock to be removed from the weapon (Figure 3-15, page 46).
2. Remove swivel screw (62735) and swivel (62737). The swivel acts as the retaining nut for the screw (Figure D-1A).
3. Remove the butt plate assembly from the stock (Figure D-1B).
4. Remove door assembly from plate. This will expose and permit disassembly of the hinge pin. (This pin is a slip fit in the hinge.) (Figure D-1C).